





Mandis LX2 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis LX2 Remote Control Instructions 



Contents

- [1 Mandis LX2 Remote Control Instructions](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

Mandis LX2 Remote Control Instructions





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 < Prev.	 << / Preset-
 0	 0
 Next >	 >> / Preset+
 EPG	 Guide / EPG / +/-
 Up	 Up
 FAV	 Fav / Marker / PC
 Left	 Left

Original	Replacement
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Media	 Display / Media
 Back	 Back / Return
 Vol +	 Vol+
 Mute	 Mute / Dimmer
 CH +	 CH+ / Page+
 Vol -	 Vol-
 CH -	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random



Original		Replacement		Original	Replacement
	<<		<< / Tune-		
	Play / Pause		Play / Slow		
	Play / Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Timer		Shift + Sleep / Timer		
	Web		Smart / List		
	Plugin		Picture / Format		
	Audio		Audio / Lang /Vl		
	PIP		Zoom / Size		
	Subtitle		Subtitle / EQ		
	Sleep		Sleep / Timer		
	Text		Text / Goto		
	TV		Shift + 1		
	Radio		TV/Radio /		
	Help		AV / Input / RDS		

Read More About This Manual & Download PDF:

Documents / Resources

[Mandis LX2 Remote Control](#) [pdf] Instructions
LX2 Remote Control, LX2, Remote Control, Control

References

- [Replacement remote control for GOLDEN INTERSTAR Xpeed LX2](#)
- [User Manual](#)