



Mandis M1900R Brimax Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis M1900R Brimax Remote Control Instructions 

Contents

- [1 Mandis M1900R Brimax Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 Menu Navigation and Settings](#)
- [6 Additional Functions](#)
- [7 Frequently Asked Questions \(FAQ\)](#)
- [8 Using Remote Control](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



Mandis M1900R Brimax Remote Control



Product Information

- The product is a remote control designed for use with the Brimax M1900R Vers2 TV model.
- It is used to control various functions of the TV, including power, volume, channel selection, menu navigation, and access to additional features.

Specifications

- **Model:** M1900R Vers2
- **Compatibility:** Brimax M1900R Vers2 TV
- **Power Source:** 2 AAA batteries (not included)
- **Wireless Range:** Up to 10 meters

Product Usage Instructions

Power and Basic Functions

- To turn on the TV, press the “Power” button.
- To mute or unmute the sound, press the “Mute” button.
- The volume can be adjusted using the “Vol +” and “Vol -” buttons.
- The channel can be changed using the “Ch +” and “Ch -” buttons.
- The “Power” and “Mute” buttons are located at the top of the remote control.

Menu Navigation and Settings

- The menu can be accessed by pressing the “Menu” button.

- Use the arrow buttons (Up, Down, Left, Right) to navigate through the menu options.
- Press the “Enter” or “OK” button to select an option.
- The “Back” button can be used to go back to the previous menu.
- The “D. Menu” button is used to access additional settings related to display options.
- The “Options” button provides additional customization options.

Additional Functions

- The remote control also provides access to additional functions.
- The “Info” button provides information about the current program or content.
- The “Text” button is used to access teletext or closed captioning.
- The “Dual” button allows you to switch between two channels.
- The “Sleep” button activates the sleep timer, and the “FAV” button provides quick access to favourite channels.
- The “Subtitle” button is used to enable or disable subtitles when available.

Frequently Asked Questions (FAQ)

- **Q:** How do I replace the batteries in the remote control?
- **A:** To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and remove the old batteries. Insert two new AAA batteries, ensuring they are correctly aligned with the polarity markings. Close the battery compartment securely.
- **Q:** How far is the wireless range of the remote control?
- **A:** The remote control has a wireless range of up to 10 meters. Ensure that there are no obstructions between the remote control and the TV for optimal performance.
- **Q:** Can I use this remote control with other TV models?
- **A:** No, this remote control is specifically designed for use with the Brimax M1900R Vers2 TV model and may not be compatible with other TV models.

Using Remote Control



Originale	Sostituto
	Power
	Mute
	Display
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Shift + Info
	Shift + Guide
	Recall
	D. Menu
	Input

Originale	Sostituto
	Auto
	LCD Menu
	V+
	V-
	P+
	P-
	Up
	Left
	Enter
	Right
	Down
	S.Mode
	P.Mode
	Nicam
	Sleep
	FAV
	Text



Originale	Sostituto
	Hold
	FAV-
	Info
	Lang
	EPG
	FAV+
	Index
	Size
	Reveal
	Subpage
	Red/Tv/Radio
	Green/Audio
	Yellow/Freeze
	Blue/Subtitle

Originale	Sostituto
	Blue/Subtitle



<https://tutti-i-telecomandi.it/it/Brimax/1062829-60741-telecomando-di-sostituzione-per-Brimax-M1900R-Vers2.html>.



[Mandis M1900R Brimax Remote Control](#) [pdf] Instructions

M1900R Brimax Remote Control, M1900R, Brimax Remote Control, Remote Control, Control

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.