



Mandis MD0523 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis MD0523 Replacement Remote Control Instructions 

Contents

- [1 Mandis MD0523 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Mandis MD0523 Replacement Remote Control



Product Information

Specifications

- **Product Name:** Power Smart
- **Model Number:** MD023
- **Compatible with:** Original Power Smart
- **Replacement Model:** MD0523
- **Website:** <https://all-remote-controls.co.uk/en/1062773-93952-replacement-remote-control-for-MD0523.html>

Product Usage Instructions

Original Power Smart Remote Control

- **Navigation:** Use the arrow keys (Up, Down, Left, Right) to navigate through menus and options.
- **Select:** Press the OK button to select an option or confirm a selection.
- **Volume Control:** Use the Vol+ and Vol- buttons to increase or decrease the volume.
- **Mute:** Press the Mute button to mute the audio.
- **Channel Control:** Use the CH+ and CH- buttons to change channels.
- **Netflix:** Press the Red button to access the Netflix app.
- **YouTube:** Press the Yellow button to access the YouTube app.
- **Google Play:** Press the Green button to access the Google Play app.

Replacement Power Smart Remote Control (MD0523)

- **Navigation:** Use the arrow keys (Up, Down, Left, Right) to navigate through menus and options.
- **Select:** Press the OK button to select an option or confirm a selection.
- **Volume Control:** Use the Vol+ and Vol- buttons to increase or decrease the volume.
- **Mute:** Press the Mute button to mute the audio.
- **Channel Control:** Use the CH+ and CH- buttons to change channels.
- **Netflix:** Press the Red button to access the Netflix app.
- **YouTube:** Press the Yellow button to access the YouTube app.
- **Prime Video:** Press the Blue button to access the Prime Video app.

Frequently Asked Questions

Q: What is the model number of the replacement remote control?

- **A:** The model number of the replacement remote control is MD0523.

Q: Where can I purchase the replacement remote control?

- **A:** You can purchase the replacement remote control from the following website: <https://all-remote-controls.co.uk/en/1062773-93952-replacement-remote-control-for-MD0523.html>

OVERVIEW



Original		Replacement		Original		Replacement	
	Power		Power		prime video		Shift + Blue / Prime
	Smart		Smart / List		Home		Shift + Yellow / Prime
	1		1		Up		Up
	2		2		Menu		Menu / Home
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Back		Back / Return
	7		7		Down		Down
	8		8		Exit		Exit / Cancel / Clear
	9		9		Vol+		Vol+
	Info		Info / Angle		Mute		Mute / Dimmer
	0		0		CH+		CH+ / Page+
	Guide		Guide / EPG / -/-		Vol-		Vol-
	Netflix		Shift + Red / Netflix		Source		AV / Input / RDS
	YouTube		Shift + Yellow / YouTube		CH-		CH- / Page-
	Google Play		Display / Media		Red		Red / Netflix / Search



Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Rec / Rec Mode
	 Pause / Step / Freeze
	 Stop / Hold
	 Text / Goto
	 Subtitle / EQ
	 Audio / Lang I/II

[MD023](#)

Documents / Resources

	Mandis MD0523 Replacement Remote Control [pdf] Instructions MD0523 Replacement Remote Control, MD0523, Replacement Remote Control, Remote Contr ol
---	---

References

- [M Replacement remote control for MD0523](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)