



Mandis MEDIAMVP Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis MEDIAMVP Remote Control Instructions 

Contents

- [1 Mandis MEDIAMVP Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Replacement Remote Button Function](#)
- [5 Frequently Asked Questions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Mandis

Mandis MEDIAMVP Remote Control



Product Information

Specifications

- **Brand:** Hauppauge
- **Model:** MediaMVP
- **Compatibility:** Hauppauge MediaMVP
- **Color:** Original
- **Dimensions:** Not specified
- **Weight:** Not specified

Product Usage Instructions

Power and Navigation

- To power on/off the device, press the “Power” button located at the top of the remote control.
- Use the directional buttons (Up, Down, Left, Right) to navigate through menus and options.

- The “OK” button is used to confirm selections within menus.
- The “Back/Exit” button is used to go back or exit the current menu or application.

Volume and Channel Control

- Adjust the volume by pressing the “Vol+” or “Vol-” buttons.
- To change channels, use the “Prev Ch” button to go to the previous channel or enter the desired channel number using the numeric keypad (0-9).

Media Playback

- To play videos, music, or view pictures, press the “Media” button followed by selecting the desired media type from the on-screen menu.
- Use the navigation buttons (Up, Down, Left, Right) to browse through media files.
- Press the “OK” button to start playing the selected media file.

TV and Radio Control

- To access TV or radio functions, press the “TV/Radio” button.
- Use the navigation buttons (Up, Down, Left, Right) to navigate through channels or radio stations.
- Press the “OK” button to select the desired channel or station.

Additional Functions

Use the various colored buttons (Red, Green, Yellow, and Blue) for specific functions like accessing apps, subtitles, searching, and more. Refer to the user manual for detailed information on these functions.

Replacement Remote Button Function

[MEDIAMVP](#)



Original	Rechange	Original	Rechange
	Home/Go		Menu / Home
	Power		Power
	TV		Shift + 1
	Videos		Display / Media
	Music		Audio / Lang I/II
	Pictures		Picture / Format
	Guide		Guide / EPG / +/-
	Up		Up
	Radio		TV/Radio /
	Left		Left
	OK		OK
	Right		Right
	Back/Exit		Exit / Cancel / Clear
	Down		Down
	i/Menu		D.Menu / Top
	Vol+		Vol+
	Prev Ch		Fav / Marker / PC



Original	Rechange	Original	Rechange
	6		6
	7		7
	8		8
	9		9
	*/Text		Text / Goto
	0		0
	#/Sub/CC		Subtitle / EQ
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random



<https://tout-telecommandes.fr/fr/Hauppauge/1066578-24370-telecommande-de-remplacement-pour-Hauppauge-MediaMVP.html>.

Frequently Asked Questions

- **Q: Where can I find a replacement remote control for the Hauppauge MediaMVP?**

A: You can find a replacement remote control for the Hauppauge MediaMVP at the following website:

[Replacement Remote Control for Hauppauge MediaMVP.](#)

- **Q: How many pages are there in the user manual?**

A: The user manual consists of 2 pages. You can find the second page at the following link: [Hauppauge MediaMVP User Manual](#).

Documents / Resources

	Mandis MEDIAMVP Remote Control [pdf] Instructions MEDIAMVP Remote Control, MEDIAMVP, Remote Control, Control
	Mandis MEDIAMVP Remote Control [pdf] Instructions MEDIAMVP Remote Control, MEDIAMVP, Remote Control, Control
	Mandis MEDIAMVP Remote Control [pdf] Instructions MEDIAMVP Remote Control, MEDIAMVP, Remote Control, Control

References

-  [Télécommandes pour tous les appareils](#)
-  [Télécommande qui remplace HAUPPAUGE MediaMVP](#)
- [User Manual](#)