



## Mandis MEDIAMVP Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis MEDIAMVP Replacement Remote Control Instructions 



### Contents

- [1 MEDIAMVP Replacement Remote Control](#)
- [2 Documents / Resources](#)
  - [2.1 References](#)
- [3 Related Posts](#)

### MEDIAMVP Replacement Remote Control



| Original | Rechange              |
|----------|-----------------------|
|          | Home/Go               |
|          | Power                 |
|          | TV                    |
|          | Videos                |
|          | Music                 |
|          | Pictures              |
|          | Guide                 |
|          | Up                    |
|          | Radio                 |
|          | Left                  |
|          | OK                    |
|          | Right                 |
|          | Back/Exit             |
|          | Down                  |
|          | i/Menu                |
|          | Vol+                  |
|          | Prev Ch               |
|          | Menu / Home           |
|          | Power                 |
|          | Shift + 1             |
|          | Display / Media       |
|          | Audio / Lang 1/2      |
|          | Picture / Format      |
|          | Guide / EPG / -/--    |
|          | Up                    |
|          | TV/Radio /            |
|          | Left                  |
|          | OK                    |
|          | Right                 |
|          | Exit / Cancel / Clear |
|          | Down                  |
|          | D.Menu / Top          |
|          | Vol+                  |
|          | Fav / Marker / PC     |

| Original | Rechange              |
|----------|-----------------------|
|          | CH+ / Page+           |
|          | Vol-                  |
|          | Mute / Dimmer         |
|          | CH- / Page-           |
|          | Rec / Rec Mode        |
|          | Stop / Hold           |
|          | << / Tune-            |
|          | Play / Slow           |
|          | >> / Tune+            |
|          | I<< / Preset-         |
|          | Pause / Step / Freeze |
|          | >>I / Preset+         |
|          | 1                     |
|          | 2                     |
|          | 3                     |
|          | 4                     |
|          | 5                     |



| Original | Rechange                    |
|----------|-----------------------------|
|          | 6                           |
|          | 7                           |
|          | 8                           |
|          | 9                           |
|          | Text / Goto                 |
|          | 0                           |
|          | Subtitle / EQ               |
|          | Red / Netflix / Search      |
|          | Green / APP / Repeat        |
|          | Yellow / YouTube / Repeat   |
|          | Blue / Prime Video / Random |

| Original | Rechange |
|----------|----------|
|----------|----------|



<https://tout-telecommandes.fr/fr/Hauppauge/1066578-24370-telecommande-de-remplacement-pour-Hauppauge-MediaMVP.html>

## Documents / Resources

|                                                                                   |                                                                                                                                                                                             |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><a href="#">Mandis MEDIAMVP Replacement Remote Control</a> [pdf] Instructions<br/>MEDIAMVP Replacement Remote Control, MEDIAMVP, Replacement Remote Control, Remote Control, Control</p> |
|  | <p><a href="#">Mandis MediaMVP Replacement Remote Control</a> [pdf] Instructions<br/>MediaMVP Replacement Remote Control, MediaMVP, Replacement Remote Control, Remote Control</p>          |

## References

-  [Télécommande qui remplace HAUPPAUGE MediaMVP](#)
- [User Manual](#)