



Mandis MPMAN001 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis MPMAN001 Remote Control Instructions 



MPMAN001 Remote Control Instructions

Contents

[1 MPMAN001 Remote
Control](#)

[2 Documents / Resources](#)

[2.1 References](#)

MPMAN001 Remote Control



MPMAN MPMAN001



Originale	Sostituto	Originale	Sostituto
	Standby		Power
	Mute		Mute
	PMode		Shift + Format
	SMode		Shift + Dual
	Sleep		Sleep
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Nicam		Dual
	Recall		Back
	Rec List		Shift + Smart
	Rec		Rec
	Time Shift		Smart
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Display		Info
	Source		AV
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit





Originale	Sostituto	Originale	Sostituto
	Vol +		
	Vol -		
	TV/R		
	Subt		
	Ch +		
	Ch -		
	Text		
	Play		
	Pause		
	Shift + Stop		
	I<<		
	Stop		
	>>I		
	Pre Ch		
	>>		
	<<		



www.mandis.tv



<https://tutti-i-telecomandi.it/it/MPMAN/1062333-65483-telecomando-di-sostituzione-per-MPMAN-MPMAN001.html>

Documents / Resources



[Mandis MPMAN001 Remote Control](#) [pdf] Instructions
MPMAN001 Remote Control, MPMAN001, Remote Control, Control

References

- [M Telecomando sostituto di MPMAN MPMAN001](#)
- [User Manual](#)