



Mandis MVP Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis MVP Replacement Remote Control Instructions 

Contents

- [1 Mandis MVP Replacement Remote Control](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Product Overview](#)
- [6 Remote Using Instructions](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis MVP Replacement Remote Control



Product Specifications

- **Product Name:** Hauppauge MediaMVP
- **Model Number:** 1066578-24370
- **Compatibility:** Compatible with various devices
- **Color:** Black

Product Usage Instructions

Basic Navigation

To navigate through the device interface, use the following buttons:

- **Home/Go:** Returns to the home screen or goes to the designated location
- **Power:** Turns the device on or off
- **Up/Down/Left/Right:** Navigates through menus and options
- **OK:** Selects an option or confirms a choice

- **Back/Exit:** Goes back to the previous screen or exits the current menu
- **i/Menu:** Opens the menu or displays additional information
- **Vol+:** Increases the volume
- **Vol-:** Decreases the volume
- **Prev Ch:** Goes to the previous channel
- **Mute:** Mutes or unmutes the audio

Media Playback Controls

The following buttons are used for media playback:

- **Play/Pause:** Plays or pauses the media
- **Stop:** Stops the media playback
- **Rec:** Starts or stops recording
- **CH+/CH-:** Changes the channel
- **Page+/Page-:** Scrolls through pages or menus
- **Tune+:** Tunes to the next available channel
- **Preset+:** Switches to the next preset channel

Additional Functions

The remote control also provides additional functions:

- **Display/Media:** Displays information or switches to media mode
- **Audio/Lang I/II:** Adjusts audio settings or switches between language options
- **Picture/Format:** Adjusts picture settings or switches between display formats
- **Guide/EPG/-/-:** Accesses the program guide or displays additional information
- **D.Menu/Top:** Opens the device menu or goes to the top of a menu
- **Fav/Marker/PC:** Marks favorite channels or switches to PC mode
- **Subtitle/EQ:** Enables or disables subtitles or adjusts equalizer settings
- **Red/Green/Yellow/Blue:** Provides quick access to specific applications or functions

FAQ

- **Q:** How do I turn on the Hauppauge MediaMVP?
 - **A:** Press the **Power** button on the remote control to turn on the device.
- **Q:** How do I navigate through menus and options?
 - **A:** Use the **Up/Down/Left/Right** buttons to navigate through menus and options. Press the **OK** button to select an option.
- **Q:** How do I adjust the volume?
 - **A:** Press the **Vol+** button to increase the volume or the **Vol-** button to decrease the volume.
- **Q:** How do I play or pause media?
 - **A:** Press the **Play/Pause** button on the remote control to play or pause the media.
- **Q:** How do I stop media playback?

- **A:** Press the **Stop** button to stop the media playback.

Product Overview



Remote Using Instructions

Original / Recharge

	Home/Go		Menu / Home
	Power		Power
	TV	 +  Shift + 1	
	Videos		Display / Media
	Music		Audio / Lang I/II
	Pictures		Picture / Format
	Guide		Guide / EPG / -/--
	Up		Up
	Radio		TV/Radio /
	Left		Left
	OK		OK
	Right		Right
	Back/Exit		Exit / Cancel / Clear
	Down		Down
	i/Menu		D.Menu / Top
	Vol+		Vol+
	Prev Ch		Fav / Marker / PC

	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>I		>>I / Preset+
	1		1
	2		2
	3		3
	4		4
	5		5

	6		6
	7		7
	8		8
	9		9
	*/Text		Text / Goto
	0		0
	#/Sub/CC		Subtitle / EQ
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

<https://tout-telecommandes.fr/fr/Hauppage/1066578-24370-telecommande-de-remplacement-pour-Hauppage-MediaMVP.html>

Documents / Resources

	Mandis MVP Replacement Remote Control [pdf] Instructions MVP Replacement Remote Control, MVP, Replacement Remote Control, Remote Control, Control
---	---

References

-  [Télécommande qui remplace HAUPPAUGE MediaMVP](#)
- [User Manual](#)