



Mandis N2QAGB000002 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis N2QAGB000002 Replacement Remote Control Instructions 

Contents

- [1 Mandis N2QAGB000002 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 KEYS FUNCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis N2QAGB000002 Replacement Remote Control



Product Information

The product is a remote control for a Panasonic device. It is a replacement remote control with the model number N2QAGB000002. The remote control is designed to operate various functions of the Panasonic device, including power control, sleep timer, playback controls, volume adjustment, and more.

Specifications

- **Model Number:** N2QAGB000002
- **Compatibility:** Panasonic devices
- **Color:** Black
- **Dimensions:** Not specified
- **Weight:** Not specified
- **Power Source:** Battery (not included)

Product Usage Instructions

• Power Control

 
- To turn on the device, press the “Power” button. To turn off the device, press and hold the “Power” button for a few seconds.

• Sleep Timer

- To set a sleep timer, press the “Sleep” button. Use the “+” button to increase the timer duration, or use the “Shift + Power” buttons to decrease the timer duration. Press the “Sleep” button again to activate the sleep timer.
- **The remote control provides various playback controls for different media sources:**
 - **CD:** Use the “1 / Disc 1” button for CD playback.
 - **Tuner:** Use the “2 / Disc 2” button for tuner control.
 - **AUX:** Use the “3 / Disc 3” button for AUX input control.
 - **EQ:** Use the “4 / Disc 4” button for equalizer control.
 - **Subt:** Use the “5 / Disc 5” button for subtitle control.
- **Volume Adjustment**
 - Use the “Vol +” and “Vol -” buttons to adjust the volume levels. Press the “Vol +” button to increase the volume, and press the “Vol -” button to decrease the volume.
- **FAQ**
 - **Q:** What is the model number of the remote control?
 - **A:** The model number of the remote control is N2QAGB000002.
 - **Q:** Where can I find a replacement remote control?
 - **A:** You can find a replacement remote control for Panasonic devices with the model number N2QAGB000002 at <https://tout-telecommandes.fr/fr/Panasonic/1059764-10568-telecommande-de-remplacement-pour-Panasonic-N2QAGB000002.html>.

KEYS FUNCTION



Original		Recharge	
	Power		Power
	Auto Off		Shift + Power
	Sleep		Sleep
	Muting		Mute
	1 / Disc 1		1
	2 / Disc 2		2
	3 / Disc 3		3
	4 / Disc 4		4
	5 / Disc 5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10		Guide
	Disc		Media
	Program		Shift + Sleep

Original		Recharge	
	Cancel		Back
	Repeat		Text
	Random		Options
	Tape		Red
	CD		Green
	Tuner		Yellow
	AUX		Blue
	EQ		Subt
	I<< / <<		I<<
	I<< / <<		I<<
	>> / >>I		>>I
	>> / >>I		>>
	Pause / Down		Pause
	Pause / Down		Down
	Pause / Down		Left
	Stop / Clear		Stop
	Stop / Clear		Exit

