



Mandis N2QAJB000069 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis N2QAJB000069 Remote Control Instructions 

Mandis N2QAJB000069 Remote Control Instructions



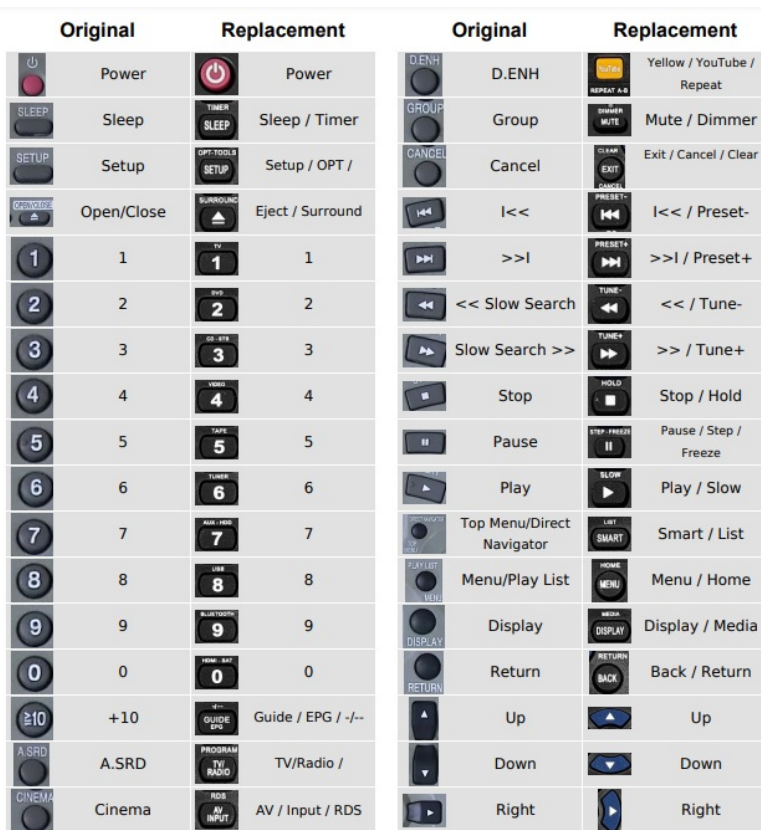 
Contents

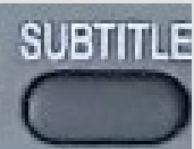 
1 INSTRUCTION

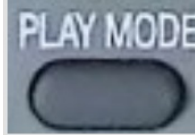 
2 Documents / Resources

2.1 References

INSTRUCTION



Original		Replacement	
	Left		Left
	Enter		OK
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II

		Angle/Page		Red / Netflix / Search
		Quick Replay		D.Menu / Top
		Play Mode		Shift + Play /
		Zoom		Zoom / Size
		Repeat		Green / APP / Repeat
		Memory		Blue / Prime Video / Random



<https://allremotecontrols.co.uk/en/Panasonic/10649589445replacementremotecontrolforPanasonicN2QAJB000069.html>

Documents / Resources

	Mandis N2QAJB000069 Remote Control [pdf] Instructions N2QAJB000069 Remote Control, N2QAJB000069, Remote Control, Control
	Mandis N2QAJB000069 Remote Control [pdf] Instructions N2QAJB000069 Remote Control, N2QAJB000069, Remote Control, Control
	Mandis N2QAJB000069 Remote Control [pdf] Instructions N2QAJB000069 Remote Control, N2QAJB000069, Remote Control, Control
	Mandis N2QAJB000069 Remote Control [pdf] Instructions N2QAJB000069 Remote Control, N2QAJB000069, Remote Control, Control
	Mandis N2QAJB000069 Remote Control [pdf] Instructions N2QAJB000069 Remote control, N2QAJB000069, Remote control, control
	Mandis N2QAJB000069 Remote Control [pdf] Instructions N2QAJB000069 Remote Control, N2QAJB000069, Remote Control, Control

References

-  [Replacement remote control for PANASONIC N2QAJB000069](#)
- [User Manual](#)