



# Mandis N2QAJB000069 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis N2QAJB000069 Replacement Remote Control Instructions 

## Contents

- [1 Mandis N2QAJB000069 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 PRODUCT OVERVIEW](#)
- [6 FUNCTION](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

# Mandis

**Mandis N2QAJB000069 Replacement Remote Control**



## Product Information

### Specifications

- Model: Panasonic N2QAJB000069
- Original remote control
- Replacement remote control available
- Compatible with Panasonic devices

## Product Usage Instructions

### Power and Sleep Setup

To power on or off the device, press the “Power” button. To set the sleep timer, press the “Sleep” button and use the number buttons (1-9) to set the desired sleep time. Press the “Setup” button to access the setup menu.

### Open/Close and Eject

For devices with an open/close or eject function, use the corresponding buttons to open or close the tray or eject a disc.

### Audio and Video Control

Use the arrow buttons (Up, Down, Left, Right) to navigate through menus and options. The “Enter” button is used to confirm selections. The remote control also provides various audio and video control options such as subtitle selection, audio language selection, and zooming in or out.

### Media Playback and Navigation

The remote control allows you to control media playback. The “Play” button starts playing the media, “Pause” button pauses the playback, and “Stop” button stops the playback. The “Step” button allows you to step through the media frame by frame. The “Fast Forward” and “Rewind” buttons help you navigate through the media quickly.

## **Menu and Navigation**

The remote control features a menu button that allows you to access the device’s menu. Use the arrow buttons to navigate through the menu options, and the “OK” button to select an option. The “Return” or “Back” button takes you back to the previous menu or screen.

## **FAQ**



 

 

 

 
 

 

 
 

 

 

 

 

 

 

 



**Where can I find a replacement remote control for Panasonic N2QAJB000069?**

You can find a replacement remote control for Panasonic N2QAJB000069 [here](#).





 
 




 
 
 


 



 

## **PRODUCT OVERVIEW**



## FUNCTION


| Original  |            | Replacement   |                    |
|---|------------|---|--------------------|
|    | Power      |    | Power              |
|    | Sleep      |    | Sleep / Timer      |
|    | Setup      |    | Setup / OPT /      |
|    | Open/Close |    | Eject / Surround   |
|    | 1          |    | 1                  |
|    | 2          |    | 2                  |
|    | 3          |    | 3                  |
|    | 4          |    | 4                  |
|    | 5          |    | 5                  |
|    | 6          |    | 6                  |
|    | 7          |    | 7                  |
|    | 8          |    | 8                  |
|   | 9          |   | 9                  |
|  | 0          |  | 0                  |
|  | +10        |  | Guide / EPG / -/-- |
|  | A.SRD      |  | TV/Radio /         |
|  | Cinema     |  | AV / Input / RDS   |

| Original  | Replacement   |
|---|---|
|  D.ENH                     |  Yellow / YouTube / Repeat |
|  Group                     |  Mute / Dimmer             |
|  Cancel                    |  Exit / Cancel / Clear     |
|  I<<                       |  I<< / Preset-             |
|  >>I                       |  >>I / Preset+             |
|  << Slow Search            |  << / Tune-                |
|  Slow Search >>            |  >> / Tune+                |
|  Stop                      |  Stop / Hold               |
|  Pause                     |  Pause / Step / Freeze     |
|  Play                      |  Play / Slow               |
|  Top Menu/Direct Navigator |  Smart / List              |
|  Menu/Play List           |  Menu / Home              |
|  Display                 |  Display / Media         |
|  Return                  |  Back / Return           |
|  Up                      |  Up                      |
|  Down                    |  Down                    |
|  Right                   |  Right                   |

| Original   | Replacement  |
|--|--|
|  Left         |  Left   |
|  Enter        |  OK   |
|  Subtitle     |  Subtitle / EQ  |
|  Audio        |  Audio / Lang I/II  |
|  Angle/Page   |  Red / Netflix / Search   |
|  Quick Replay |  D.Menu / Top   |
|  Play Mode    |  +  Shift + Play / |
|  Zoom         |  Zoom / Size  |
|  Repeat       |  Green / APP / Repeat   |
|  Memory       |  Blue / Prime Video / Random  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

<https://all-remote-controls.co.uk/en/Panasonic/1064958-9445-replacement-remote-control-for-Panasonic-N2QAJB000069.html>

## Documents / Resources

|   |  |
|---|--|
|  | <a href="#">Mandis N2QAJB000069 Replacement Remote Control</a> [pdf] Instructions<br>N2QAJB000069 Replacement Remote Control, N2QAJB000069, Replacement Remote Control , Remote Control, Control |
|---|--|

## References

-  [Replacement remote control for PANASONIC N2QAJB000069](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)