



Mandis NEV005 Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis NEV005 Remote Control Instruction Manual 

Contents

- [1 Mandis NEV005 Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 Menu Navigation](#)
- [6 Other Controls](#)
- [7 FUNCTIONS](#)
- [8 Frequently Asked Questions](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



Mandis NEV005 Remote Control



Product Information

The product is a remote control for a Nevir device. It is designed to control various functions of the device, including power, volume, channel selection, playback controls, and menu navigation. The remote control has a compact and ergonomic design, making it easy to hold and operate.

Specifications

- **Model:** NEV005
- **Compatibility:** Designed for use with Nevir devices
- **Color:** Black
- **Power Source:** 2 AAA batteries (not included)
- **Range:** Up to 10 meters

Product Usage Instructions

Power and Standby

To turn the device on or off, press the **Power** button.

Volume Control

To adjust the volume, use the **VOL+** and **VOL-** buttons.

Channel Selection

To change the channel, use the **CH+** and **CH-** buttons.

Playback Controls

To control the playback of media, use the following buttons:

- **PLAY PAUSE/STEP:** Press once to play or pause media. Press repeatedly for step-by-step playback.
- **STOP II/NEXT:** Press once to stop playback. Press twice to skip to the next track or chapter.
- **RETURN/FF:** Press once to go back. Press and hold to fast forward.

Menu Navigation

To navigate through the device's menu, use the directional buttons: **UP**, **DOWN**, **LEFT**, and **RIGHT**. Press the **ENTER** button to select an option.



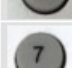
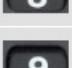
Other Controls





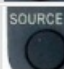


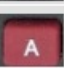
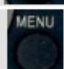

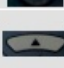
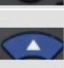
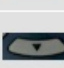
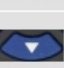



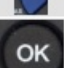
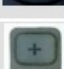


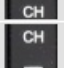
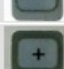
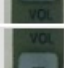



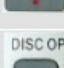
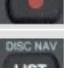
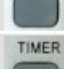

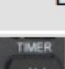
The remote control also includes additional buttons for specific functions:



- **MUTE:** Press to mute or unmute the audio.
- **EJECT:** Press to open or close the disc tray.
- **SUBTITLE:** Press to enable or disable subtitles.
- **SOURCE:** Press to switch between different input sources.
- **MENU:** Press to access the device's main menu.
- **SETUP:** Press to enter the setup menu for configuration options.

FUNCTIONS

Originale		Sostituto	
	Standby		Power
	OPEN/CLOSE		Eject
	SUBTITLE		Subt
	AUDIO		Dual
	ANGLE		Guide
	PS/IS		Green
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	GOTO		Shift + Guide

	MUTE		Mute
	SETUP		Options
	SOURCE		AV
	TITLE		Red
	MENU		Menu
	UP		Up
	DOWN		Down
	RIGHT		Right
	LEFT		Left
	ENTER		Ok
	CH+		Ch +
	CH-		Ch -
	VOL+		Vol +
	VOL-		Vol -
	REC/OTR		Rec
	DISC OP		List
	TIMER	 + 	Shift + AV

	PLAY		Play
	PAUSE/STEP		Pause
	STOP		Stop
	I<</PREV		I<<
	>>I/NEXT		>>I
	RETURN		Back
	<</FB		<<
	DVD		Smart
	>>/FF		>>
	ERASE		Yellow
	TIMESHIFT		3D
	ADD/CLEAR		Exit
	RANDOM		Blue
	ZOOM		Shift + Eject
	HDD/DUB		Media
	EDIT		Shift + Exit
	DV/USB		D. Menu
	FINALIZE		Pre Ch
	QUALITY		Shift + Back
	DISPLAY		Info
	A-B		TV/R
	REPEAT		Text
	PROGRAM		Sleep
	SORT/SLOW		Format

Frequently Asked Questions

How do I replace the batteries in the remote control?

To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and remove the old batteries. Insert two new AAA batteries, making sure to match the polarity markings. Close the compartment securely.

Can I use this remote control with other brands of devices?

This remote control is specifically designed for use with Nevir devices and may not be compatible with other brands.

Where can I purchase a replacement remote control?

You can purchase a replacement remote control for this device from the following website: Replacement Remote Control for Never NEV005.

Documents / Resources



[Mandis NEV005 Remote Control](#) [pdf] Instruction Manual
NEV005, NEV005 Remote Control, Remote Control, Control

References

- [M Telecomando sostituto di NEVIR NEV005](#)
- [User Manual](#)