



Mandis Oki SB MEDIA PLAYER 1G Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Oki SB MEDIA PLAYER 1G Replacement Remote Control Instructions 

Contents

- [1 Mandis Oki SB MEDIA PLAYER 1G Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 KEY FUNCTIONS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis Oki SB MEDIA PLAYER 1G Replacement Remote Control



Product Information

- **Specifications:**
 - **Model:** Oki SB MEDIA PLAYER 1G
 - **Color:** Black
 - **Memory:** 1GB
 - **Power Source:** Rechargeable battery
 - **Audio Output:** Dual speakers
 - **Connectivity:** Smart Media Options
 - **Dimensions:** (L x W x H) – [provide dimensions if available]

Product Usage Instructions

- **Power and Volume Control:**
 - To turn on the device, press the “Power” button. Use the “Vol +” and “Vol -” buttons to increase or decrease the volume respectively. Press the “Mute” button to mute or unmute the audio.
- **Navigation and Playback:**
 - Use the arrow buttons (Up, Right, Down, Left) to navigate through menus and options. Press the “OK” button to select an option. To play or pause media, press the “Play / Pause” button. Press the “Stop” button to stop playback.

- **Playlist and Album Control:**

- Use the “Playlist Up” and “Playlist Down” buttons to navigate through playlists. Use the “Album Up” and “Album Down” buttons to switch between albums.

- **Channel and EQ Control:**

- Use the “Ch +” and “Ch -” buttons to switch between channels. Use the “Power EQ” button to access the equalizer settings.

- **FAQ:**

 
- **Q:** How do I connect the Oki SB MEDIA PLAYER 1G to my TV?
- **A:** The Oki SB MEDIA PLAYER 1G can be connected to your TV using the provided Smart Media Options. Please refer to the user manual for detailed instructions on connecting the device to your TV.
- **Q:** How do I recharge the battery?
- **A:** To recharge the battery, connect the device to a power source using the provided charging cable. The device will start charging automatically.

KEY FUNCTIONS



Original		Rechange	
	Power		Power
	EQ		Dual
	Mute		Mute
	Album Up		Vol +
	Album Down		Vol -
	Playlist Up		Ch +
	Playlist Down		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original		Rechange	
	Star		Pre Ch
	Guía		Guide
	Buscar		Smart
	Media		Media
	Grab		Options
	Info		Info
	Menu		Menu
	Salir		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Bass		Format
	Treb		3D
	Red / Rec		Red
	Green		Green

Original		Rechange		Original	Rechange
	Yellow		Yellow		
	Blue		Blue		
	Red / Rec		Rec		
	<<		<<		
	>>		>>		
	Play / Pause		Play		
	Play / Pause		Pause		
	Stop		Stop		
	>I		>>I		
	I<		I<<		
	I>		Shift + Pause		
	Ir A		Back		
	Widgets TV		Text		
	Top TV		AV		

<https://tout-telecommandes.fr/fr/Oki/1058698-24702-telecommande-de-remplacement-pour-Oki-SB-MEDIA-PLAYER-1G-SOUNDBAR-1GB.html>.

Documents / Resources

	Mandis Oki SB MEDIA PLAYER 1G Replacement Remote Control [pdf] Instructions Oki SB MEDIA PLAYER 1G Replacement Remote Control, Oki SB MEDIA PLAYER 1G, Replacement Remote Control, Remote Control
---	--

References

- [M Télécommande qui remplace OKI SB MEDIA PLAYER 1G \(SOUNDBAR 1GB\)](#)
- [User Manual](#)