



Mandis Onkyo RC-707M-RECEIVER Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Onkyo RC-707M-RECEIVER Remote Control Instructions 

Contents

- [1 Mandis Onkyo RC-707M-RECEIVER Remote Control](#)
- [2 Product Usage Instructions](#)
- [3 FAQ:](#)
- [4 PRODUCT OVERVIEW](#)
- [5 FUNCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Mandis

Mandis Onkyo RC-707M-RECEIVER Remote Control



Specifications:

- Model: RC-707M
- Compatible with: Onkyo RC-717M
- Color: Black
- Power Source: 2 AAA Batteries (not included)
- Dimensions: 7.5 x 2 x 0.8 inches
- Weight: 3 ounces

Product Usage Instructions

Power On/Off

To power on the receiver, press the “Power” button. To power off, press the “Power” button again.

Volume Control

To increase the volume, press the “Vol+” button. To decrease the volume, press the “Vol-” button.

Channel Selection:

To change the channel, use the “CH+” or “CH-” buttons.

Input Selection

Use the following buttons to select different input sources:

- DVD
- VCR / DVR
- CBL / SAT
- GAME / TV
- MULTI CH
- AUX
- TAPE
- TUNER
- CD
- PHONO

Media Control:

Use the following buttons for media control:

- Play/Pause: Press the “Pause / Play” button
- Stop: Press the “Stop” button
- Fast Forward: Press the “Rev.” button
- Rewind: Press the “Rev.” button
- Previous Track: Press the “CH/Disc-” button
- Next Track: Press the “CH/Disc+” button

Display and Menu Navigation:

- Display Menu: Press the “D.Menu / Top” button
- Menu Navigation: Use the arrow buttons (Left, Right, Up, Down) to navigate through menus
- Enter/OK: Press the “Enter” or “OK” button to confirm selections
- Return: Press the “Back / Return” button to go back to previous menus

FAQ:

Q: What batteries does the remote control use?

A: The remote control uses 2 AAA batteries (not included).

Q: What are the dimensions of the remote control?

A: The remote control measures 7.5 x 2 x 0.8 inches.

Q: Is the remote control compatible with Onkyo RC-717M?

A: Yes, the RC-707M remote control is compatible with Onkyo RC-717M.

 
PRODUCT OVERVIEW



FUNCTION

Original		Replacement	
	On / Standby		Power
	Display		Display / Media
	DVD		Shift + 2
	VCR / DVR		D.Menu / Top
	CBL / SAT		AV / Input / RDS
	GAME / TV		Shift + 1
	MULTI CH		TV/Radio /
	AUX		Shift + 7
	TAPE		Shift + 5
	TUNER		Shift + 6
	CD		Shift + 3
	PHONO		Shift + Audio / Lang I/II
	Muting		Mute / Dimmer
	CH/Disc+ /		CH+ / Page+
	Vol+		Vol+
	CH/Disc- / Album-		CH- / Page-
	Vol-		Vol-

Original	Replacement
 SP A/B	 Yellow / YouTube / Repeat
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Audio	 Audio / Lang I/II
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause / Play Rev.	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original		Replacement	
	Movie/TV		Shift + Display / Media
	Music		Shift + Smart / List
	Game		Smart / List
	THX		Picture / Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	D.TUN		Shift + 9
	Dimmer		Shift + Mute / Dimmer
	0		0
	Sleep		Sleep / Timer

<https://all-remote-controls.co.uk/en/Onkyo/1061317-66284-replacement-remote-control-for-Onkyo-RC-717M-24140717.html>

Documents / Resources

	Mandis Onkyo RC-707M-RECEIVER Remote Control [pdf] Instructions 24140717, 66284, Onkyo RC-707M-RECEIVER Remote Control, Onkyo RC-707M-RECEIVER, Remote Control, Control, Remote
	Mandis Onkyo RC-707M-RECEIVER Remote Control [pdf] Instructions Onkyo RC-707M-RECEIVER Remote Control, Onkyo RC-707M-RECEIVER, Remote Control, Control

References

- [M Replacement remote control for ONKYO RC-717M \(24140717\)](#)
- [User Manual](#)

