

Mandis Onkyo RC-717M Remote Control



Mandis Onkyo RC-717M Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Onkyo RC-717M Remote Control Instructions 

Contents

- [1 Mandis Onkyo RC-717M Remote Control](#)
- [2 Specifications](#)
- [3 Product Usage Instructions:](#)
- [4 FAQs](#)
- [5 OVER VIEW](#)
- [6 BUTTON FUNCTION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Mandis

Mandis Onkyo RC-717M Remote Control



Specifications

- Product Name: Onkyo RC-707M-RECEIVER
- Model: RC-707M
- Compatible Devices: DVD, VCR / DVR, CBL / SAT, GAME / TV, MULTI CH, AUX, TAPE, TUNER, CD, PHONO
- Power Source: 2 x AAA Batteries
- Dimensions: (L x W x H) 8.5 x 2 x 1 inches
- Weight: 0.2 lbs

Product Usage Instructions:

Power On / Standby

To turn the device on or off, press the “Power” button located on the remote control.

Device Selection

Use the following buttons to select the desired device:

- DVD
- VCR / DVR
- CBL / SAT
- GAME / TV
- MULTI CH
- AUX

- TAPE
- TUNER
- CD
- PHONO

Volume Control

To adjust the volume, use the “Vol+” and “Vol-” buttons on the remote control.

Channel Selection

To change channels, use the “CH+” and “CH-” buttons on the remote control.

Muting

To mute the sound, press the “Mute” button on the remote control.

Display / Media Controls

Use the following buttons for display and media controls:

- Display / Media +
- Display / Media –
- D.Menu / Top
- AV / Input
- TV/Radio
- Program Shift
- Audio / Lang I/II
- Mute / Dimmer
- Pause / Play
- Rev. Stop
- Yellow / YouTube / Repeat
- Up Menu / Home
- Left OK Right Setup / OPT / DTools
- Back / Return
- Audio / Lang I/II
- I>I / Preset+
- Tune+
- Pause / Step / Freeze
- Stop / Hold
- Smart / List
- Picture / Format
- Sleep / Timer

FAQs

Q: Where can I find a replacement remote control for the Onkyo RC-707M-RECEIVER?

 
 
 
 
 
 
 
A: You can find a replacement remote control for Onkyo RC-707M-RECEIVER at the following website:

[Replacement Remote Control for Onkyo RC-707M-RECEIVER](#)

 
 
OVER VIEW



BUTTON FUNCTION

Original	Replacement
 On / Standby	 Power
 Display	 Display / Media
 DVD	 Shift + 2
 VCR / DVR	 D.Menu / Top
 CBL / SAT	 AV / Input / RDS
 GAME / TV	 Shift + 1
 MULTI CH	 TV/Radio /
 AUX	 Shift + 7
 TAPE	 Shift + 5
 TUNER	 Shift + 6
 CD	 Shift + 3
 PHONO	 Shift + Audio / Lang I/II
 Muting	 Mute / Dimmer
 CH/Disc+ /	 CH+ / Page+
 Vol+	 Vol+
 CH/Disc- / Album-	 CH- / Page-
 Vol-	 Vol-

Original	Replacement
 SP A/B	 Yellow / YouTube / Repeat
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Audio	 Audio / Lang I/II
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause / Play Rev.	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 Movie/TV	 Shift + Display / Media
 Music	 Shift + Smart / List
 Game	 Smart / List
 THX	 Picture / Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 D.TUN	 Shift + 9
 Dimmer	 Shift + Mute / Dimmer
 0	 0
 Sleep	 Sleep / Timer

<https://all-remote-controls.co.uk/en/Onkyo/1061317-66284-replacement-remote-control-for-Onkyo-RC-717M-24140717.html>

Documents / Resources

	Mandis Onkyo RC-717M Remote Control [pdf] Instructions Onkyo RC-717M, Onkyo RC-717M Remote Control, Remote Control, Control
	Mandis ONKYO RC-717M Remote Control [pdf] Instructions ONKYO RC-717M, ONKYO RC-717M Remote Control, Remote Control, Control

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)