



# Mandis ONKYO RC799M Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis ONKYO RC799M Replacement Remote Control Instructions 



## RC799M-RECEIVER-TV (TV)



| Original                                                                            | Replacement                     | Original                                                                              | Replacement |
|-------------------------------------------------------------------------------------|---------------------------------|---------------------------------------------------------------------------------------|-------------|
|  | Power Receiver                  |    | Power       |
|  | Enter Receiver                  |    | Ok          |
|  | Up Receiver                     |    | Up          |
|  | Down Receiver                   |    | Down        |
|  | Right Receiver                  |    | Right       |
|  | Left Receiver                   |    | Left        |
|  | Return Receiver                 |    | Back        |
|  | Q/Setup Receiver                |    | Smart       |
|  | Home/Audio                      |    | Media       |
|  | Play Receiver                   |    | Play        |
|  | I<< Receiver                    |    | I<<         |
|  | >>I Receiver                    |    | >>I         |
|  | << Receiver                     |    | <<          |
|  | >> Receiver                     |    | >>          |
|  | Pause Receiver                  |    | Pause       |
|  | Stop Receiver                   |    | Stop        |
|  | 1 Receiver                      |    | 1           |
|  | 2 Receiver                      |  | 2           |
|  | 3 Receiver                      |  | 3           |
|  | 4 Receiver                      |  | 4           |
|  | 5 Receiver                      |  | 5           |
|  | 6 Receiver                      |  | 6           |
|  | 7 Receiver                      |  | 7           |
|  | 8 Receiver                      |  | 8           |
|  | 9 Receiver                      |  | 9           |
|  | 0/11 Receiver                   |  | 0           |
|  | +10/-/-10/Dimmer/D.Tun Receiver |  | Shift +     |
|  | CLR/Sleep/12 Receiver           |  | Guide       |
|  | Movie Tv/Red/Search             |  | Red         |
|  | Music/Green/Repeat Receiver     |  | Green       |
|  | Game/Yellow/Random Receiver     |  | Yellow      |
|  | Stereos/Blue/Mode Receiver      |  | Blue        |
|  | Vol+ Receiver                   |  | Vol +       |
|  | Vol- Receiver                   |  | Vol -       |



[illegible]

## Contents

- [1 Documents / Resources](#)
- [1.1 References](#)

## Documents / Resources



[Mandis ONKYO RC799M Replacement Remote Control](#) [pdf] Instructions  
ONKYO RC799M Replacement Remote Control, ONKYO RC799M, Replacement Remote Control, Remote Control

## References

- [M Replacement remote control for ONKYO RC799M \(188557423\)](#)
- [User Manual](#)