



Mandis PEEKBOX 40 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis PEEKBOX 40 Remote Control Instructions 



Contents

- [1 PEEKBOX 40 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

PEEKBOX 40 Remote Control

[IR PEEKBOX 40](#)



Original	Rechange	Original	Rechange
	Power		Power
	Setup		Setup / OPT /
	Disk		Yellow / YouTube / Repeat
	Disk		Shift + 7
	1		1
	2		2
	3		3
	HDMI/AV		AV / Input / RDS
	HDMI/AV		Blue / Prime Video / Random
	HDMI/AV		Shift + 0
	4		4
	5		5
	6		6
	Mute		Mute / Dimmer
	7		7
	8		8
	9		9
	Edit		Fav / Marker / PC
	Copy		Guide / EPG / -/-
	Dir		Text / Goto
	0		0
	Movie		Smart / List
	Music		Display / Media
	Photo		Shift + Display / Media
	Vol-		Vol-
	Vol+		Vol+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Repeat		Green / APP / Repeat
	Pause		Pause / Step / Freeze
	Step		Shift + Pause / Step / Freeze



Original	Rechange	Original	Rechange
	<</Rev		<< / Tune-
	Play		Play / Slow
	I<</PG Up		I<< / Preset-
	I<</PG Up		CH+ / Page+
	>>/FF		>> / Tune+
	Stop		Stop / Hold
	>>/PG Dn		>> / Preset+
	>>/PG Dn		CH- / Page-
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	PSM		D.Menu / Top
	Info		Info / Angle
	Home		Menu / Home
	Exit		Exit / Cancel / Clear
	S.Show		Picture / Format
	DVD		Red / Netflix / Search
	DVD		Shift + 2



<https://tout-telecommandes.fr/fr/PEEKTON/1056145-21404-telecommande-de-remplacement-pour-PEEKTON-IR-Peekbox40.html>



[Mandis PEEKBOX 40 Remote Control](#) [pdf] Instructions
PEEKBOX 40 Remote Control, PEEKBOX 40, Remote Control

References

- [M Télécommande qui remplace PEEKTON IR Peekbox40](#)
- [User Manual](#)