



Mandis PEEKTON IR Peekbox40 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis PEEKTON IR Peekbox40 Replacement Remote Control Instructions 

Mandis PEEKTON IR Peekbox40 Replacement Remote Control Instructions



 
 
 
 
 
 
Contents

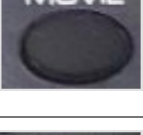 
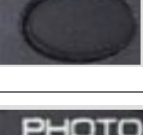 
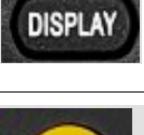 
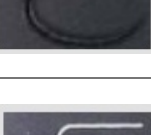 
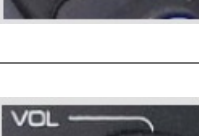 
 
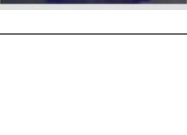 
- [1 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

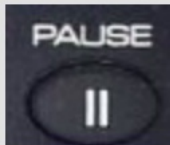 
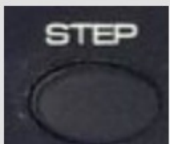 
 
 
 
Remote Control



Original	Recharge
 Power	 Power
 Setup	 Setup / OPT /
 Disk	 Yellow / YouTube / Repeat
 Disk	 Shift + 7

 1	 1
 2	 2
 3	 3
 HDMI/AV	 AV / Input / RDS
 HDMI/AV	 Blue / Prime Video / Random
 HDMI/AV	 Shift + 0
 4	 4
 5	 5
 6	 6
 Mute	 Mute / Dimmer
 7	 7

 8	 8
 9	 9
 Edit	 Fav / Marker / PC
 Copy	 Guide / EPG / -/--
 Dir	 Text / Goto
 0	 0
 Movie	 Smart / List
 Music	 Display / Media
 Photo	 Shift + Display / Media
 Vol-	 Vol-
 Vol+	 Vol+
 Up	 Up

 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Repeat	 Green / APP / Repeat
 Pause	 Pause / Step / Freeze
 Step	 +  Shift + Pause / Step / Freeze
 <</Rev	 << / Tune
 Play	 Play / Slow
 I<</PG Up> < /PG Up	 I<< / Preset
 I<</PG Up> < /PG Up	 CH+ / Page+

 FF >>/FF	 TUNE+ >> / Tune+
 STOP Stop	 HOLD Stop / Hold
 PG.DN >>I/PG Dn	 PRESET+ >>I / Preset+
 PG.DN >>I/PG Dn	 CH PAGE CH- / Page
 AUDIO Audio	 LANG I/II AUDIO Audio / Lang I/II
 SUB-T Sub-T	 EQ SUBTITLE Subtitle / EQ
 PSM PSM	 TOP MENU D.MENU D.Menu / Top
 INFO Info	 ANGLE INFO Info / Angle
 HOME Home	 HOME MENU Menu / Home
 EXIT Exit	 CLEAR EXIT CANCEL Exit / Cancel / Clear

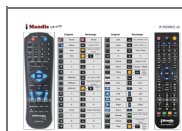 
 S.Show	 Picture / Format
 DVD	 Red / Netflix / Search
 DVD	 Shift + 2



<https://tout-telecommandes.fr/fr/PEEKTON/1056145-21404-telecommande-de-remplacement-pour-PEEKTON-IR-Peekbox40.html>



Documents / Resources



[Mandis PEEKTON IR Peekbox40 Replacement Remote Control](#) [pdf] Instructions
PEEKTON IR Peekbox40 Replacement Remote Control, PEEKTON IR Peekbox40, Replacement Remote Control, Remote Control

References

- [M Télécommande qui remplace PEEKTON IR Peekbox40](#)
- [User Manual](#)