



Mandis Pioneer AXD7737 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Pioneer AXD7737 Replacement Remote Control Instructions 



Instructions



Mandis Pioneer AXD7737 Replacement Remote Control

Contents

- [1 Pioneer AXD7737 Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

Pioneer AXD7737 Replacement Remote Control



Original	Rechange
Standby/on	Power
Open/Close	Eject / Surround
Disc/Bluetooth	9
FM	6
Preset/Album	CH+ / Page+
USB/Audio In	8
<</Tune-	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>/>>I	>> / Tune+
Preset/Album	CH- / Page-
Repeat	Green / APP / Repeat
Vol+	Vol+
Stop	Stop / Hold
Vol-	Vol-
Shuffle	Blue / Prime Video / Random
Mute	Mute / Dimmer

Original	Rechange
Dimmer/Display	Display / Media
Program	TV/Radio /
EQ	Subtitle / EQ
Clock	Shift + Sleep / Timer
Sleep/Timer	Sleep / Timer



Original	Rechange
Standby/on	Power
Open/Close	Eject / Surround
Disc/Bluetooth	9
FM	6
Preset/Album	CH+ / Page+
USB/Audio In	8
<</Tune-	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>/>>I	>> / Tune+
Preset/Album	CH- / Page-
Repeat	Green / APP / Repeat
Vol+	Vol+
Stop	Stop / Hold
Vol-	Vol-
Shuffle	Blue / Prime Video / Random
Mute	Mute / Dimmer

Original	Rechange
Dimmer/Display	Display / Media
Program	TV/Radio /
EQ	Subtitle / EQ
Clock	Shift + Sleep / Timer
Sleep/Timer	Sleep / Timer



<https://tout-telecommandes.fr/fr/Pioneer/1058392-65904-telecommande-de-remplacement-pour-Pioneer-AXD7737-8.50.1.RCXEM222RR2.html>

Pioneer AXD7737 ()

Mandis shop



[Mandis Pioneer AXD7737 Replacement Remote Control](#) [pdf] Instructions

Pioneer AXD7737 Replacement Remote Control, Pioneer AXD7737, Replacement Remote Control, Remote Control

References

- [M Télécommande qui remplace PIONEER AXD7737 \(8.50.1.RCXEM222RR2\)](#)
- [User Manual](#)