



Mandis RAKCH144WH Technics Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RAKCH144WH Technics Remote Control Instructions 

Mandis RAKCH144WH Technics Remote Control Instructions



Contents

- [1 Remote Control Instructions](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

Original		Recharge		Original		Recharge	
	Power		Power		Pause		Pause
	Sleep		Sleep		Stop		Stop
	Tuner/Band		Green		I<<		I<<
	Auto/Mono		Pre Ch		>>I		>>I
	1		1		Program		Shift + Sleep
	2		2		Cancel		Exit
	3		3		Deck 1/2		Blue
	4		4		> Deck 1/2		Right
	5		5		< Deck 1/2		Left
	6		6		Stop Deck 1/2		Ok
	7		7		<< Deck 1/2		<<
	8		8		>> Deck 1/2		>>
	9		9		Rec Pause		Rec

	0		0		Flat		Options
	+10		Guide		EQ Space		Dual
	CD		Yellow		Balance R		Ch +
	Play		Play		Balance L		Ch –
	Vol+		Vol+				
	Vol-		Vol-				
	Muting		Mute				



Documents / Resources

	Mandis RAKCH144WH Technics Remote Control [pdf] Instructions RAKCH144WH Technics Remote Control, RAKCH144WH, Technics Remote Control, Remote Control, Control
---	--

References

- [Télécommandes pour tous les appareils](#)
- [Télécommande qui remplace TECHNICS RAKCH144WH](#)
- [User Manual](#)