



Mandis RAKSU129WH Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RAKSU129WH Remote Control Instructions 

 
 
Mandis RAKSU129WH Remote Control Instructions



 
Contents

 
 
- [1 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Remote Control

Original	Recharge
 POWER	 Power
 AUDIO OFF	 Mute / Dimmer
 MUTING	 +  Shift + Mute / Dimmer
 TAPE 1	 +  Shift + 4
 TAPE 2	 +  Shift + 5
 CD	 +  Shift + 3
 TUNER	 +  Shift + 6
 DCC	 Text / Goto
 AUX	 +  Shift + 7
 PHONO	 Audio / Lang I/II
 PRESET -	 +  Shift + I<< / Preset
 PRESET -	 Subtitle / EQ
 PRESET +	 +  Shift + >>I / Preset+
 PRESET +	 Eject / Surround

 BAND	 Display / Media
 Deck 1/2	 Shift + 1
1	1

Original	Recharge
2	2
3	3
 DISC	 Smart / List
4	4
5	5
6	6
 +10	 Guide / EPG / -/-
7	7
8	8
9	9
0	0
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-

 >>	 >> / Tune+
 PAUSE	 Pause / Step / Freeze
 STOP	 Stop / Hold
 Play Reverse	 Shift + Play /
 PLAY	 Play / Slow
 VOLUME -	 Vol
 VOLUME -	 Shift + Vol -
 VOLUME +	 Vol+
 VOLUME +	 Shift + Vol+

<https://tout-telecommandes.fr/fr/Technics/1057692-21622-telecommande-de-remplacement-pour-Technics-RAKSU129WH.html>



Documents / Resources

	Mandis RAKSU129WH Remote Control [pdf] Instructions RAKSU129WH Remote Control, RAKSU129WH, Remote Control, Control
---	---

References

-  [Télécommande qui remplace TECHNICS RAKSU129WH](#)
- [User Manual](#)