



Mandis RAKSU129WH Technics Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RAKSU129WH Technics Remote Control Instructions 

Mandis RAKSU129WH Technics Remote Control



Contents

 
 
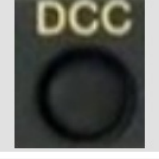 
- [1 Product Overview](#)
- [2 Buttons Descriptions](#)
- [3 Customers Support](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

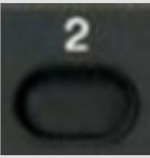 
Product Overview

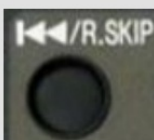 


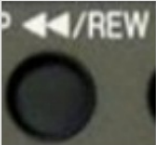 
 
 
 
Buttons Descriptions

Original	Recharge
----------	----------

	POWER		Power
	AUDIO OFF		Mute / Dimmer
	MUTING	 + 	Shift + Mute / Dimmer
	TAPE 1	 + 	Shift + 4
	TAPE 2	 + 	Shift + 5
	CD	 + 	Shift + 3
	TUNER	 + 	Shift + 6
	DCC		Text / Goto
	AUX	 + 	Shift + 7

	PHONO	 AUDIO	Audio / Lang I/II
	PRESET -	 + 	Shift + << / Preset-
	PRESET -	 SUBTITLE	Subtitle / EQ
	PRESET +	 + 	Shift + >> / Preset+
	PRESET +	 SURROUND	Eject / Surround
	BAND	 DISPLAY	Display / Media
	Deck 1/2	 + 	Shift + 1
	1		1
	2		2
	3		3
	DISC	 SMART	Smart / List

	4		4
	5		5
	6		6
	+10		Guide / EPG / -/--
	7		7
	8		8
	9		9
	0		0
	I<<		I<< / Preset-

	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	PAUSE		Pause / Step / Freeze
	STOP		Stop / Hold
	Play Reverse	 + 	Shift + Play /
	PLAY		Play / Slow
	VOLUME -		Vol-
	VOLUME -	 + 	Shift + Vol-
	VOLUME +		Vol+
	VOLUME +	 + 	Shift + Vol+



Documents / Resources



[Mandis RAKSU129WH Technics Remote Control](#) [pdf] Instructions
RAKSU129WH Technics Remote Control, RAKSU129WH, Technics Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace TECHNICS RAKSU129WH](#)
- [User Manual](#)