



Mandis RAV538 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RAV538 Remote Control Instructions 

Contents

- [1 Mandis RAV538 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Product Overview](#)
- [6 Remote Using Instruction](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis RAV538 Remote Control



Product Information

Specifications

- Product Name: Yamaha RAV538-MAIN
- Power Source: Receiver Power
- Buttons: Power, +, Shift, Guide, Ok, Up, Down, Right, Left, Enter, Top Menu, Pop Up Menu, On Screen Option, Return, Display Mode, Stop, Pause, Play/Band, >|>| Movie, Left, Ok, Menu, Options, Back, Info, Media, Dual, Subt, Sleep, TV/R, Text, Ch +, Ch -, Vol +, Vol -, Mute, Red, Green, Yellow, List, Format, HDMI Out, HDMI 1-5, V-AUX, AV 1-6, Audio Tuner, USB, Bluetooth, NET Phono

Product Usage Instructions

Power On/Off

To turn on the device:

1. Press the Power button.
2. To turn off the device:
3. Press and hold the Shift button.
4. While holding the Shift button, press the Power button.

Menu Navigation

To navigate the menu:

- Use the Up/Down/Left/Right buttons to move the cursor.
- Press the Enter button to select an option.
- To go back to the previous menu:
 - Press the Return button.
 - Or press and hold the Shift button while pressing the Menu button.

Media Control

To control media playback:

- Press the Stop button to stop playback.
- Press the Pause button to pause playback.
- Press the Play/Band button to play or switch to the next available band.

Volume Control

To adjust the volume:

- Press the Vol+ button to increase the volume.
- Press the Vol- button to decrease the volume.
- Press the Mute button to mute/unmute the sound.

Input Selection

To select an input source:

- Use the AV buttons to cycle through different input sources.

FAQ

Q: Where can I find a replacement remote control for Yamaha RAV538-MAIN?

A: You can find a replacement remote control for Yamaha RAV538-MAIN [here](#).

Q: How do I access the Smart features of Yamaha RAV538-MAIN?

 
A: To access the Smart features, press the Smart button on the remote control.

 
Product Overview



 
 
Remote Using Instruction

Original / Replacement

	Power Receiver		Power
	Power Source		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10/Memory		Shift + Guide
	ENT		Shift + Ok
	Up		Up
	Down		Down
	Right		Right

	Left		Left
	Enter		Ok
	Top Menu		Shift + Menu
	Pop Up Menu		Menu
	On Screen		Shift + Options
	Option		Options
	Return		Back
	Display		Shift + Info
	Mode		Media
	Stop		Stop
	Pause		Pause
	Play/Band		Play
	<< Tuning		<<
	Tuning >>		>>
	I<< Preset		I<<
	Preset >>I		>>I
	Movie		Smart

	Music		Shift + Media
	Sur.Decode		Dual
	Straight		Subt
	Info		Info
	Sleep		Sleep
	Enhancer		TV/R
	Pure Direct		Text
	Program+		Ch +
	Program-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	BD/DVD		Red
	TV		Green
	NET		Yellow
	Radio		List
	Party		Format

	HDMI Out		AV
	HDMI 1		Shift + 1
	HDMI 2		Shift + 2
	HDMI 3		Shift + 3
	HDMI 4		Shift + 4
	HDMI 5		Shift + 5
	V-AUX		Shift + 6
	AV 1		Shift + 7
	AV 2		Shift + 8
	AV 3		Shift + 9
	AV 4		Guide
	AV 5		Shift + 0
	AV 6		Pre Ch
	Audio		Shift + Dual
	Tuner		Shift + TV/R
	USB		Shift + Subt
	Bluetooth		3D

NET	NET	SHIFT	+	REPEAT TEXT	Shift + Text
PHONO	Phono	SHIFT	+	TIMER AV	Shift + AV

Yamaha RAV538-ZONE2

	Power Receiver		Power
	Power Source		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10/Memory		Shift + Guide
	ENT		Shift + Ok
	Info		Info
	Sleep		Sleep
	Top Menu		Shift + Menu

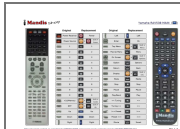 
	Pop Up Menu		Menu
	On Screen		Shift + Options
	Option		Options
	Return		Back
	Display		Shift + Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Mode		Media
	Stop		Stop
	Pause		Pause
	Play/Band		Play
	<< Tuning		<<
	Tuning >>		>>
	I<< Preset		I<<

	Preset >>I		>>I
	Program+		Ch +
	Program-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	BD/DVD		Red
	TV		Green
	NET		Yellow
	Radio		TV/R
	Party		Format
	HDMI Out		AV
	HDMI 1		Shift + 1
	HDMI 2		Shift + 2
	HDMI 3		Shift + 3
	HDMI 4		Shift + 4
	HDMI 5		Shift + 5

	V-AUX		Shift + 6
	AV 1		Shift + 7
	AV 2		Shift + 8
	AV 3		Shift + 9
	AV 4		Guide
	AV 5		Shift + 0
	AV 6		Pre Ch
	Audio		Dual
	Tuner		D. Menu
	Bluetooth		Subt
	USB		Text
	NET		Shift + Media
	Phono		Smart

- <https://all-remote-controls.co.uk/en/Yamaha/1055207-82700-replacement-remote-control-for-Yamaha-RAV538-ZP601300.html>
-

Documents / Resources



[Mandis RAV538 Remote Control](#) [pdf] Instructions
RAV538 Remote Control, RAV538, Remote Control, Control

References

- [M Replacement remote control for YAMAHA RAV538 \(ZP601300\)](#)
- [User Manual](#)