




Mandis RC 1082 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC 1082 Remote Control Instructions 

Contents

- [1 Mandis RC 1082 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 KEY FUNCTIONS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis RC 1082 Remote Control



Product Information

- **Specifications**
 - **Colors:** Red, Green, Yellow, Blue
 - **Buttons:** Power, Exit, [+], [x], [], [/], []/[+]/Wide, [?], [i]/Guide
 - **Number Buttons:** 1, 2, 3






























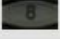








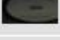









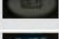





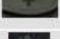









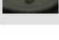



Product Usage Instructions

- **Power Button**
 - The power button is used to turn the product on or off.
- **Exit Button**
 - The exit button is used to exit a menu or cancel an action.
- **[+]**
 - The [+] button is used for a specific function. Please refer to the user manual for more information.
- **[x]**
 - The [x] button is used for a specific function. Please refer to the user manual for more information.
- **[]**
 - The [] button is used for a specific function. Please refer to the user manual for more information.
- **[/]**

- The [/] button is used for a specific function. Please refer to the user manual for more information.
- **[+]/Wide**
 - The [+]/Wide button is used for a specific function. Please refer to the user manual for more information.
- **[?]**
 - The [?] button is used for a specific function. Please refer to the user manual for more information.
- **[i]/Guide**
 - The [i]/Guide button is used for a specific function. Please refer to the user manual for more information.
- **Number Buttons**
 - The number buttons (1, 2, 3) are used for a specific function. Please refer to the user manual for more information.
- **FAQ**
 - **Q:** What are the available colors?
 - **A:** The available colors are Red, Green, Yellow, and Blue.
 - **Q:** What does the power button do?
 - **A:** The power button is used to turn the product on or off.
 - **Q:** How do I exit a menu or cancel an action?
 - **A:** Press the Exit button to exit a menu or cancel an action.

KEY FUNCTIONS



Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Red/↑		Red / Netflix / Search		5		5
	green/↓		Green / APP / Repeat		6		6
	Yellow		Yellow / YouTube / Repeat		7		7
	Blue		Blue / Prime Video / Random		8		8
	Exit		Exit / Cancel / Clear		9		9
	[≡o]		Sleep / Timer		P<P/Swap		Picture / Format
	[≡+]		Stop / Hold		0		0
	[≡x]		Smart / List		-/--		Shift + Guide / EPG / -/--
	[≡]		Text / Goto		Vol-		Vol-
	[/≡]		Setup / OPT /		Vol+		Vol+
	[≡♦]/[+]/Wide		Menu / Home		Mute		Mute / Dimmer
	[≡?]		Shift + Info / Angle		P-		CH- / Page-
	[≡i]/Guide		Guide / EPG / -/--		P+		CH+ / Page+
	1		1		[i]/Info		Info / Angle
	2		2		Tv/DTV		TV/Radio /
	3		3		[AV]/Source		AV / Input / RDS

[illegible]

<https://all-remote-controls.co.uk/en/1039501-18289-replacement-remote-control-for-RC-1082-20275427.html>.

Documents / Resources



Mandis RC 1082 Remote Control [pdf] Instructions
RC 1082 Remote Control, RC 1082, Remote Control, Control

References

- [Replacement remote control for RC 1082 \(20275427\)](#)
- [User Manual](#)