



Mandis RC 1091 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC 1091 Replacement Remote Control Instructions 

Contents

- [1 Mandis RC 1091 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 KEYS FUNCTION](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Mandis RC 1091 Replacement Remote Control



Product Information

• Specifications

- Power: 1-9
- Special Function: –

• Description

- The product is a power device with adjustable power levels ranging from 1 to 9.
- It also has a special function represented by the symbol “-”.
- The device is designed to provide power and perform specific tasks based on the selected power level.

• Features

- Adjustable power levels
- Special function capability
- Easy-to-use interface
- Included in the Package
- 1x Power device
- 1x User manual

Product Usage Instructions

• Step 1: Power On

- To begin using the product, ensure that it is connected to a power source. Press and hold the power button until the device powers on. The power indicator light will illuminate to indicate that the device is ready for use.
- **Step 2: Select Power Level**
 - The product offers nine different power levels, ranging from 1 to 9. To select a specific power level, press the corresponding number on the keypad. The selected power level will be displayed on the screen.
- **Step 3: Special Function**
 - The product also has a special function represented by the symbol “-“. To activate this function, press the special function button. The special function will perform a specific task based on the current power level.
- **Step 4: Power Off**
 - To power off the device, press and hold the power button until the device shuts down. The power indicator light will turn off to indicate that the device is no longer powered.
- **Cleaning and Maintenance**
 - Before cleaning the device, make sure it is disconnected from the power source.
 - Use a soft, damp cloth to gently wipe the surface of the device. Avoid using harsh chemicals or abrasive materials that may damage the product.
- **Troubleshooting**
 - If you experience any issues with the product, refer to the troubleshooting section in the user manual for possible solutions.
 - If the issue persists, contact our customer support for further assistance.
- **FAQ**
 - **Q:** How do I adjust the power level?
 - **A:** To adjust the power level, press the corresponding number on the keypad that corresponds to the desired power level.
 - **Q:** What does the special function do?
 - **A:** The special function is designed to perform a specific task based on the current power level. Press the special function button to activate it.
 - **Q:** How do I clean the device?
 - **A:** Before cleaning, ensure that the device is disconnected from the power source. Use a soft, damp cloth to gently wipe the surface of the device. Avoid using harsh chemicals or abrasive materials.

KEYS FUNCTION




Original		Replacement		Original		Replacement	
	Power		Power		Down / P-		Down
	1		1		Down / P-		Ch -
	2		2		Right / Vol+		Right
	3		3		Right / Vol+		Vol +
	4		4		Left / Vol-		Left
	5		5		Left / Vol-		Vol -
	6		6		OK		Ok
	7		7		I/II		Dual
	8		8		PP		Back
	9		9		TV		TV/R
	0		0		AV		AV
	--		Guide		Mute		Mute
	P<P		Pre Ch		Red / Sound		Red
	Menu		Menu		Red / Sound	+	Shift + Dual
	[i]		Info		Green / Picture		Format
	Up / P+		Up		Green / Picture		Green
	Up / P+		Ch +		Yellow / Feature		Yellow

Original		Replacement		Original	Replacement
	Blue / Install		Blue		
	[≡]		Text		
	[≡⌚]		Sleep		
	[≡□]		Stop		
	[≡X] / [■]		Exit		
	[/≡] [■]	 + 	Shift + Text		
	[≡⬆] / [□]		Eject		
	[≡?] / PC		Smart		
	[≡i]		Options		

<https://all-remote-controls.co.uk/en/1060701-18471-replacement-remote-control-for-RC-1091-30044625.html>.

Documents / Resources



[Mandis RC 1091 Replacement Remote Control](#) [pdf] Instructions
RC 1091 Replacement Remote Control, RC 1091, Replacement Remote Control, Remote Control

References

- [User Manual](#)