



Mandis RC-1121-M Denon Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-1121-M Denon Remote Control Instructions 

Mandis RC-1121-M Denon Remote Control



Contents

- [1 Product Overview](#)
- [2 Buttons Descriptions](#)
- [3 CUSTOMER SUPPORT](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

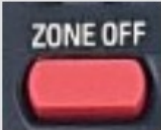 
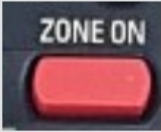 
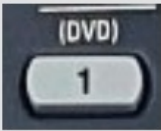 
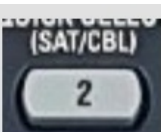 
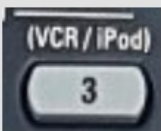 
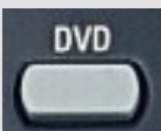 
Product Overview





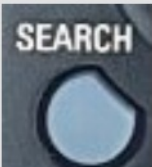 
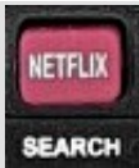 
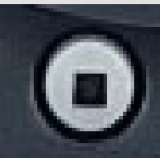 
Buttons Descriptions

Original	Replacement
----------	-------------

	Zone Off	 + 	Shift + Power
	Zone On		Power
	Quick Select 1 (DVD)		1
	Quick Select 2 (SAT/CBL)		2
	Quick Select 3 (VCR/iPod)		3
	DVD	 + 	Shift + 2
	TV	 + 	Shift + 1
	iPod		Guide / EPG / -/--
	HDP		7

	Net/USB		8
	SAT/CBL		9
	VCR		4
	DVR		D.Menu / Top
	V.AUX		Fav / Marker / PC
	Tuner		6
	SAT TU		0
	DTU		5
	CD	 +  Shift + 3	
	Phono		Smart / List
	M.Zone Call		Display / Media

	CH+		CH+ / Page+
	Shift		Setup / OPT /
	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Menu		Menu / Home
	Up		Up
	Memory		Info / Angle

	Left		Left
	Enter		OK
	Right		Right
	Search		Red / Netflix / Search
	Down		Down
	Return		Back / Return
	I<</Tuning-		I<< / Preset-
	>>I/Tuning+		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze

	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	USB Direct Play		TV/Radio /
	All		Audio / Lang I/II

CUSTOMER SUPPORT

[Denon RC1121-M \(!\[\]\(7e49c700e4adaed94ad5398cf2e7059e_img.jpg\) \)](#)

<https://all-remote-controls.co.uk/en/Denon/1066337-87050-replacement-remote-control-for-Denon-RC-1121-307010045008D.html>





[Mandis RC-1121-M Denon Remote Control](#) [pdf] Instructions

RC-1121-M Denon Remote Control, RC-1121-M, Denon Remote Control, Remote Control, Control

References

- [M Replacement remote control for DENON RC-1121 \(307010045008D\)](#)
- [User Manual](#)