



Mandis RC-1121-M Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-1121-M Remote Control Instructions 

Contents

- [1 Mandis RC-1121-M Remote Control](#)
- [2 PRODUCT OVERVIEW](#)
- [3 REMOTE USING INSTRUCTIONS](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



Mandis RC-1121-M Remote Control



Specifications:

- **Model:** RC1121-M
- **Compatibility:** Denon products
- **Power:** Battery-operated
- **Connectivity:** Infrared (IR)
- **Color:** Black

Product Usage Instructions:

The remote control features three Quick Select buttons that allow you to easily switch between different devices. Press the corresponding button to select the desired device:

- **Quick Select 1:** DVD
- **Quick Select 2:** SAT/CBL
- **Quick Select 3:** VCR/iPod

Navigating the Remote Control:

The remote control features various buttons for navigation and control:

- **Power:** Turns the device on or off.
- **Guide / EPG:** Opens the electronic program guide.
- **D.Menu / Top:** Accesses the device's menu or returns to the top of a list.
- **Fav / Mark:** Marks favorite channels or programs.
- **CD Phono M.Zone Call:** Controls CD playback, Phono input, Multi-Zone, and call functions.
- **CH+ / Page+:** Increases the channel or page number.

- **CH- / Page-**: Decreases the channel or page number.
- **Mute / Dimmer**: Mutes the sound or adjusts the display brightness.
- **Vol+ / Vol-**: Increases or decreases the volume.
- **Menu / Home**: Opens the device's menu or returns to the home screen.
- **Info / Angle**: Displays information or adjusts the viewing angle.
- **OK**: Confirms a selection.
- **Red / Netflix / Search**: Accesses Red button functions, Netflix, or search.

Replacement Remote Control:

If you need a replacement remote control, you can purchase one from the following website:

[Replacement Remote Control for Denon RC1121](#)

FAQ

Q: How do I turn on the device?

A: Press the Power button on the remote control.

Q: How do I navigate through menus and lists?

A: Use the D.Menu / Top button to access menus or return to the top of a list. Use the arrow buttons (Up, Down, Left, Right) to navigate within menus and lists. Press OK to confirm a selection.

Q: How do I adjust the volume?

A: Use the Vol+ and Vol- buttons to increase or decrease the volume.

Q: How do I mute the sound?

A: Press the Mute button on the remote control.

[illegible]

Original		Replacement		Original		Replacement	
	Zone Off	 + 	Shift + Power		CD	 + 	Shift + 3
	Zone On		Power		Phono		Smart / List
	Quick Select 1 (DVD)		1		M.Zone Call		Display / Media
	Quick Select 2 (SAT/CBL)		2		CH+		CH+ / Page+
	Quick Select 3 (VCR/iPod)		3		Shift		Setup / OPT /
	DVD	 + 	Shift + 2		Vol+		Vol+
	TV	 + 	Shift + 1		CH-		CH- / Page-
	iPod		Guide / EPG / +/-		Mute		Mute / Dimmer
	HDP		7		Vol-		Vol-
	Net/USB		8		Menu		Menu / Home
	SAT/CBL		9		Up		Up
	VCR		4		Memory		Info / Angle
	DVR		D.Menu / Top		Left		Left
	V.AUX		Fav / Marker / PC		Enter		OK
	Tuner		6		Right		Right
	SAT TU		0		Search		Red / Netflix / Search
	DTU		5		Down		Down

[illegible]

REMOTE USING INSTRUCTIONS



Original	Replacement
	Zone Off
	Zone On
	Quick Select 1 (DVD)
	Quick Select 2 (SAT/CBL)
	Quick Select 3 (VCR/iPod)
	DVD
	TV
	iPod
	HDP
	NET/USB
	SAT/CBL
	VCR
	DVR
	V.AUX
	Tuner
	SAT TU
	DTU

Original	Replacement
	CD
	Phono
	M.Zone Call
	CH+ / Page+
	Shift
	Vol+
	CH- / Page-
	Mute
	Vol-
	Menu
	Up
	Memory
	Left
	Enter
	Right
	Search
	Down



Original	Replacement
	Return
	I<< / Tuning-
	>>I / Tuning+
	Stop
	Play
	Pause
	Repeat
	Random
	USB Direct Play
	All





Original	Replacement	Original	Replacement
	Zone Off	+	Shift + Power
	Zone On		Power
	Quick Select 1 (DVD)	1	1
	Quick Select 2 (SAT/CBL)	2	2
	Quick Select 3 (VCR/iPod)	3	3
	DVD	+ 2	Shift + 2
	TV	+ 1	Shift + 1
	iPod		Guide / EPG / -/--
	HDP	7	7
	NET/USB	8	8
	SAT/CBL	9	9
	VCR	4	4
	DVR		D.Menu / Top
	V.AUX		Fav / Marker / PC
	Tuner	6	6
	SAT TU	0	0
	DTU	5	5
	CD	+ 3	Shift + 3
	Phono		Smart / List
	M.Zone Call		Display / Media
	CH+	CH PAGE+	CH+ / Page+
	Shift		Setup / OPT /
	Vol+		Vol+
	CH-	CH PAGE-	CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Memory		Info / Angle
	Search		Red / Netflix / Search
	I<</Tuning-		I<< / Preset-
	>>/Tuning+		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Repeat		Green / APP / Repeat

	Random		Blue / Prime Video / Random
	USB Direct Play		TV/Radio /
	All		Audio / Lang I/II





<https://all-remote-controls.co.uk/en/Denon/1066337-87050-replacement-remote-control-for-Denon-RC-1121-307010045008D.html>

Documents / Resources



[Mandis RC-1121-M Remote Control \[pdf\] Instructions](#)
RC-1121-M, 307010045008D, RC-1121-M Remote Control, Remote Control, Control

References

- [Replacement remote control for DENON RC-1121 \(307010045008D\)](#)
- [User Manual](#)