

Mandis RC-1121-M Replacement Remote Control



Mandis RC-1121-M Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-1121-M Replacement Remote Control Instructions 

Contents

- [1 Mandis RC-1121-M Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 KEYS FUNCTIONS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis RC-1121-M Replacement Remote Control



Product Information

• Specifications

- **Product Name:** Denon RC1121-M
- **Model:** RC1121-M
- **Compatibility:** Denon RC-1121
- **Replacement Part Number:** 307010045008D
- **Color:** Black
- **Type:** Remote Control

Product Usage Instructions

• Power On/Off

- To power on the device, press the “Power” button. To power off the device, press and hold the “Power” button.

• Quick Select

- The “Quick Select” buttons allow you to easily switch between different modes or devices. Press the corresponding button for the desired mode or device.

• Navigating Channels and Menus

- Use the arrow buttons (Up, Down, Left, Right) to navigate through channels and menus. Press the

“Enter” button to select an option.

- **Volume Control**

- Use the “Vol+” and “Vol-” buttons to increase or decrease the volume respectively. Press the “Mute” button to mute/unmute the sound.

- **Media Playback**

- Use the playback buttons (Play, Pause, Stop) to control media playback. Use the navigation buttons (Forward, Rewind) to skip or go back in media.





- **Frequently Asked Questions (FAQ)**





- **Q: How do I replace the remote control?**
 - **A:** To replace the remote control, purchase a compatible replacement remote control and follow the manufacturer’s instructions for pairing it with your device.
- **Q: What is the purpose of the “Quick Select” buttons?**
 - **A:** The “Quick Select” buttons allow you to quickly switch between different modes or devices without having to manually navigate through menus.
- **Q: How do I navigate through channels and menus?**
 - **A:** Use the arrow buttons (Up, Down, Left, Right) to navigate through channels and menus. Press the “Enter” button to select an option.

KEYS FUNCTIONS










Denon RC1121-M (TV)



Original		Replacement		Original		Replacement	
	Zone Off	 + 	Shift + Power		CD	 + 	Shift + 3
	Zone On		Power		Phono		Smart / List
	Quick Select 1 (DVD)		1		M.Zone Call		Display / Media
	Quick Select 2 (SAT/CBL)		2		CH+		CH+ / Page+
	Quick Select 3 (VCR/iPod)		3		Shift		Setup / OPT /
	DVD	 + 	Shift + 2		Vol+		Vol+
	TV	 + 	Shift + 1		CH-		CH- / Page-
	iPod		Guide / EPG / -/-		Mute		Mute / Dimmer
	HDP		7		Vol-		Vol-
	Net/USB		8		Menu		Menu / Home
	SAT/CBL		9		Up		Up
	VCR		4		Memory		Info / Angle
	DVR		D.Menu / Top		Left		Left
	V.AUX		Fav / Marker / PC		Enter		OK
	Tuner		6		Right		Right
	SAT TU		0		Search		Red / Netflix / Search
	DTU		5		Down		Down

Original		Replacement		Original	Replacement
	Return		Back / Return		
	I<</Tuning-		I<< / Preset-		
	>>I/Tuning+		>>I / Preset+		
	Stop		Stop / Hold		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	Repeat		Green / APP / Repeat		
	Random		Blue / Prime Video / Random		
	USB Direct Play		TV/Radio /		
	All		Audio / Lang I/II		

Denon RC1121-22 (DVD)

Original	Replacement	Original	Replacement
 Zone Off	 +  Shift + Power	 CD	 +  Shift + 3
 Zone On	 Power	 Phono	 Smart / List
 Quick Select 1 (DVD)	 1	 M.Zone Call	 Display / Media
 Quick Select 2 (SAT/CBL)	 2	 CH+	 CH+ / Page+
 Quick Select 3 (VCR/iPod)	 3	 Shift	 Setup / OPT /
 DVD	 +  Shift + 2	 Vol+	 Vol+
 TV	 +  Shift + 1	 CH-	 CH- / Page-
 iPod	 Guide / EPG / -/--	 Mute	 Mute / Dimmer
 HDP	 7	 Vol-	 Vol-
 NET/USB	 8	 Menu	 Menu / Home
 SAT/CBL	 9	 Up	 Up
 VCR	 4	 Memory	 Info / Angle
 DVR	 D.Menu / Top	 Left	 Left
 V.AUX	 Fav / Marker / PC	 Enter	 OK
 Tuner	 6	 Right	 Right
 SAT TU	 0	 Search	 Red / Netflix / Search
 DTU	 5	 Down	 Down

Original		Replacement		Original	Replacement
	Return		Back / Return		
	I<</Tuning-		I<< / Preset-		
	>>I/Tuning+		>>I / Preset+		
	Stop		Stop / Hold		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	Repeat		Green / APP / Repeat		
	Random		Blue / Prime Video / Random		
	USB Direct Play		TV/Radio /		
	All		Audio / Lang I/II		

Denon RC1121-23 (SAT)

Original	Replacement
 Zone Off	 +  Shift + Power
 Zone On	 Power
 Quick Select 1 (DVD)	 1
 Quick Select 2 (SAT/CBL)	 2
 Quick Select 3 (VCR/iPod)	 3
 DVD	 +  Shift + 2
 TV	 +  Shift + 1
 iPod	 Guide / EPG / -/-
 HDP	 7
 NET/USB	 8
 SAT/CBL	 9
 VCR	 4
 DVR	 D.Menu / Top
 V.AUX	 Fav / Marker / PC
 Tuner	 6
 SAT TU	 0
 DTU	 5

Original	Replacement
 CD	 +  Shift + 3
 Phono	 Smart / List
 M.Zone Call	 Display / Media
 CH+	 CH+ / Page+
 Shift	 Setup / OPT /
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Menu	 Menu / Home
 Up	 Up
 Memory	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Search	 Red / Netflix / Search
 Down	 Down

Original		Replacement		Original	Replacement
	Return		Back / Return		
	I<</Tuning-		I<< / Preset-		
	>>I/Tuning+		>>I / Preset+		
	Stop		Stop / Hold		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	Repeat		Green / APP / Repeat		
	Random		Blue / Prime Video / Random		
	USB Direct Play		TV/Radio /		
	All		Audio / Lang I/II		

Denon RC1121-Z4 (AUX)

Original		Replacement	
	Zone Off	 + 	Shift + Power
	Zone On		Power
	Quick Select 1 (DVD)		1
	Quick Select 2 (SAT/CBL)		2
	Quick Select 3 (VCR/iPod)		3
	DVD	 + 	Shift + 2
	TV	 + 	Shift + 1
	iPod		Guide / EPG / -/--
	HDP		7
	NET/USB		8
	SAT/CBL		9
	VCR		4
	DVR		D.Menu / Top
	V.AUX		Fav / Marker / PC
	Tuner		6
	SAT TU		0
	DTU		5

Original		Replacement	
	CD	 + 	Shift + 3
	Phono		Smart / List
	M.Zone Call		Display / Media
	CH+		CH+ / Page+
	Shift		Setup / OPT /
	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Memory		Info / Angle
	Search		Red / Netflix / Search
	I<</Tuning-		I<< / Preset-
	>>I/Tuning+		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Repeat		Green / APP / Repeat

[illegible]

<https://all-remote-controls.co.uk/en/Denon/1066337-87050-replacement-remote-control-for-Denon-RC-1121-307010045008D.html>.

Documents / Resources



[Mandis RC-1121-M Replacement Remote Control](#) [pdf] Instructions
RC-1121-M Replacement Remote Control, RC-1121-M, Replacement Remote Control, Remote Control

References

- [Replacement remote control for DENON RC-1121 \(307010045008D\)](#)
- [User Manual](#)