



Mandis RC-1121 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-1121 Remote Control Instructions 



[Denon RC1121-M \(!\[\]\(d66ff64371a51729ac8c1cdaa685ba6f_img.jpg\) \)](#)

Contents

- [1 RC-1121 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

RC-1121 Remote Control



Original		Replacement		Original		Replacement	
	Zone Off	 + 	Shift + Power		CD	 + 	Shift + 3
	Zone On		Power		Phono		Smart / List
	Quick Select 1 (DVD)	 1	1		M.Zone Call		Display / Media
	Quick Select 2 (SAT/CBL)	 2	2		CH+		CH+ / Page+
	Quick Select 3 (VCR/iPod)	 3	3		Shift		Setup / OPT /
	DVD	 + 	Shift + 2		Vol+		Vol+
	TV	 +  1	Shift + 1		CH-		CH- / Page-
	iPod		Guide / EPG / -/-		Mute		Mute / Dimmer
	HDP	 7	7		Vol-		Vol-
	Net/USB	 8	8		Menu		Menu / Home
	SAT/CBL	 9	9		Up		Up
	VCR	 4	4		Memory		Info / Angle
	DVR		D.Menu / Top		Left		Left
	V.AUX		Fav / Marker / PC		Enter		OK
	Tuner	 6	6		Right		Right
	SAT TU	 0	0		Search		Red / Netflix / Search
	DTU	 5	5		Down		Down

[illegible]



Original		Replacement		Original		Replacement	
	Zone Off	 + 	Shift + Power		CD	 + 	Shift + 3
	Zone On		Power		Phono		Smart / List
	Quick Select 1 (DVD)	 1	1		M.Zone Call		Display / Media
	Quick Select 2 (SAT/CBL)	 2	2		CH+		CH+ / Page+
	Quick Select 3 (VCR/iPod)	 3	3		Shift		Setup / OPT /
	DVD	 + 	Shift + 2		Vol+		Vol+
	TV	 +  1	Shift + 1		CH-		CH- / Page-
	iPod		Guide / EPG / -/-		Mute		Mute / Dimmer
	HDP	 7	7		Vol-		Vol-
	NET/USB	 8	8		Menu		Menu / Home
	SAT/CBL	 9	9		Up		Up
	VCR	 4	4		Memory		Info / Angle
	DVR		D.Menu / Top		Left		Left
	V.AUX		Fav / Marker / PC		Enter		OK
	Tuner	 6	6		Right		Right
	SAT TU	 0	0		Search		Red / Netflix / Search
	DTU	 5	5		Down		Down

[illegible]

[illegible]

[illegible]

Documents / Resources



[Mandis RC-1121 Remote Control](#) [pdf] Instructions
RC-1121 Remote Control, RC-1121, Remote Control, Control

References

- [M Replacement remote control for DENON RC-1121 \(307010045008D\)](#)
- [User Manual](#)