



# Mandis RC-1121 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-1121 Replacement Remote Control Instructions 

## Contents

- [1 Mandis RC-1121 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Replacement Remote Button Function](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

# Mandis

**Mandis RC-1121 Replacement Remote Control**



## Product Information

### Specifications

- **Model:** Denon RC1121-M
- Replacement remote control
- Compatible with Denon RC-1121
- **Power:** Requires batteries (not included)

### Product Usage Instructions

#### Power On/Off

- To power the device, press the **Power** button.
- To power off, press and hold the **Power** button.

#### Quick Select

The remote control has three quick select buttons labeled 1, 2, and 3. These buttons can be customized to quickly access your preferred devices. To set up a quick selection, follow these steps:

1. Press and hold the desired quick select button (1, 2, or 3).
2. Select the device you want to assign to the quick select button using the corresponding buttons on the remote control (e.g., DVD, SAT/CBL, VCR/iPod).

3. Release the quick select button to save the selection.

## Navigation and Controls

The remote control provides various navigation and control options:

- **Arrow Buttons:** Use the arrow buttons (Up, Down, Left, Right) to navigate menus and options.
- **OK:** Press the OK button to confirm selections.
- **Volume Control:** Use the Volume+ and Volume- buttons to adjust the volume.
- **Mute:** Press the Mute button to mute/unmute the audio.
- **Menu/Home:** Press the Menu/Home button to access the main menu or return to the home screen.

## Frequently Asked Questions (FAQ)

- **Q: Is the Denon RC1121-M compatible with other Denon models?**

A: The Denon RC1121-M is specifically designed as a replacement remote control for the Denon RC-1121 model.

- **Q: What type of batteries does the remote control require?**

A: The remote control requires standard batteries, which are not included in the package.

- **Q: How can I customize the quick select buttons?**

A: To customize the quick select buttons, follow the instructions provided in the "Quick Select" section above.

- **Q: Can I use this remote control with multiple devices?**

A: Yes, the Denon RC1121-M can be used with multiple devices by assigning them to the quick select buttons or using the navigation and control options.

## Replacement Remote Button Function

[Denon RC1121-M](#) ()



Original	Replacement
Zone Off	+  Shift + Power
Zone On	Power
Quick Select 1 (DVD)	1
Quick Select 2 (SAT/CBL)	2
Quick Select 3 (VCR/iPod)	3
DVD	+  2 Shift + 2
TV	+  1 Shift + 1
iPod	Guide / EPG / -/-
HDP	7
Net/USB	8
SAT/CBL	9
VCR	4
DVR	D.Menu / Top
V.AUX	Fav / Marker / PC
Tuner	6
SAT TU	0
DTU	5

Original	Replacement
CD	+  3 Shift + 3
Phono	Smart / List
M.Zone Call	Display / Media
CH+	CH+ / Page+
Shift	Setup / OPT /
Vol+	Vol+
CH-	CH- / Page-
Mute	Mute / Dimmer
Vol-	Vol-
Menu	Menu / Home
Up	Up
Memory	Info / Angle
Left	Left
Enter	OK
Right	Right
Search	Red / Netflix / Search
Down	Down



Original	Replacement
Return	Back / Return
I<</Tuning-	I<< / Preset-
>>/Tuning+	>>I / Preset+
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
Repeat	Green / APP / Repeat
Random	Blue / Prime Video / Random
USB Direct Play	TV/Radio /
All	Audio / Lang I/II

Original	Replacement
----------	-------------



Denon RC1121-Z2 ()





Original	Replacement
	Zone Off
	Zone On
	Quick Select 1 (DVD)
	Quick Select 2 (SAT/CBL)
	Quick Select 3 (VCR/iPod)
	DVD
	TV
	iPod
	HDP
	NET/USB
	SAT/CBL
	VCR
	DVR
	V.AUX
	Tuner
	SAT TU
	DTU

Original	Replacement
	CD
	Phono
	M.Zone Call
	CH+ / Page+
	Shift
	Vol+ / Page+
	CH- / Page-
	Mute / Dimmer
	Vol-
	Menu / Home
	Up
	Memory
	Left
	Enter
	Right
	Search
	Down



Original	Replacement
	Return
	I<< / Preset-
	>>I / Preset+
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	Repeat / APP / Repeat
	Blue / Prime Video / Random
	TV/Radio /
	Audio / Lang I/II

Original	Replacement



Denon RC1121-Z3 ( )





Original	Replacement	Original	Replacement
 Return	 Back / Return		
 I<</Tuning-	 I<< / Preset-		
 >>I/Tuning+	 >>I / Preset+		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Repeat	 Green / APP / Repeat		
 Random	 Blue / Prime Video / Random		
 USB Direct Play	 TV/Radio /		
 All	 Audio / Lang I/II		





[illegible]

## Documents / Resources

	<p><a href="#">Mandis RC-1121 Replacement Remote Control</a> [pdf] Instructions RC-1121 Replacement Remote Control, RC-1121, Replacement Remote Control, Remote Control, Control</p>
	<p><a href="#">Mandis RC-1121 Replacement Remote Control</a> [pdf] Instructions RC-1121 Replacement Remote Control, RC-1121, Replacement Remote Control, Remote Control, Control</p>

## References

-  [Replacement remote control for DENON RC-1121 \(307010045008D\)](#)
- [User Manual](#)