



Mandis RC-1121Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-1121Replacement Remote Control Instructions 



Contents

- [1 RC-1121Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

RC-1121Replacement Remote Control



Denon RC1121-M (TV)



Original	Replacement	Original	Replacement
	Zone Off		Shift + Power
	Zone On		Power
	Quick Select 1 (DVD)		1
	Quick Select 2 (SAT/CBL)		2
	Quick Select 3 (VCR/iPod)		3
	DVD		Shift + 2
	TV		Shift + 1
	iPod		Guide / EPG / -/-
	HDP		7
	Net/USB		8
	SAT/CBL		9
	VCR		4
	DVR		D.Menu / Top
	V.AUX		Fav / Marker / PC
	Tuner		6
	SAT TU		0
	DTU		5
	CD		Shift + 3
	Phono		Smart / List
	M.Zone Call		Display / Media
	CH+		CH+ / Page+
	Shift		Setup / OPT /
	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Menu		Menu / Home
	Up		Up
	Memory		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Search		Red / Netflix / Search
	Down		Down





Original		Replacement	
	Zone Off	 + 	Shift + Power
	Zone On		Power
	Quick Select 1 (DVD)		1
	Quick Select 2 (SAT/CBL)		2
	Quick Select 3 (VCR/iPod)		3
	DVD	 + 	Shift + 2
	TV	 + 	Shift + 1
	iPod		Guide / EPG / +/-
	HDP		7
	NET/USB		8
	SAT/CBL		9
	VCR		4
	DVR		D.Menu / Top
	V.AUX		Fav / Marker / PC
	Tuner		6
	SAT TU		0
	DTU		5

Original		Replacement	
	CD	 + 	Shift + 3
	Phono		Smart / List
	M.Zone Call		Display / Media
	CH+		CH+ / Page+
	Shift		Setup / OPT /
	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Menu		Menu / Home
	Up		Up
	Memory		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Search		Red / Netfix / Search
	Down		Down



[illegible]

Original		Replacement	
	Zone Off	 + 	Shift + Power
	Zone On		Power
	Quick Select 1 (DVD)	 1	1
	Quick Select 2 (SAT/CBL)	 2	2
	Quick Select 3 (VCR/iPod)	 3	3
	DVD	 +  2	Shift + 2
	TV	 +  1	Shift + 1
	iPod		Guide / EPG / +/-
	HDP	 7	7
	NET/USB	 8	8
	SAT/CBL	 9	9
	VCR	 4	4
	DVR	 D.MENU	D.Menu / Top
	V.AUX	 PC Fav MARKER	Fav / Marker / PC
	Tuner	 6	6
	SAT TU	 0	0
	DTU	 5	5

Original		Replacement	
	CD	 + 	Shift + 3
	Phono		Smart / List
	M.Zone Call		Display / Media
	CH+		CH+ / Page+
	Shift		Setup / OPT /
	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Menu		Menu / Home
	Up		Up
	Memory		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Search		Red / Netflix / Search
	Down		Down



