



Mandis RC-1229 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-1229 Remote Control Instructions 



Contents

- [1 RC-1229 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

RC-1229 Remote Control



Original	Recharge	Original	Recharge
Power	Power	Tone	AV / Input / RDS
Clock	Shift + Sleep / Timer	Volume+	Vol+
Sleep	Sleep / Timer	Preset-	Shift + I<< / Preset-
CD	Shift + 3	Mute	Mute / Dimmer
Analog In	D.Menu / Top	Volume-	Vol-
Optical In	Setup / OPT /	Dimmer	Shift + Mute / Dimmer
FM	Smart / List	Info	Info / Angle
AM	Display / Media	Up	Up
Bluetooth	Shift + 9	Left	Left
I<<	I<< / Preset-	Enter	OK
Play	Play / Slow	Right	Right
Pause	Pause / Step / Freeze	Back	Back / Return
>>I	>>I / Preset+	Down	Down
<</Tune-	<< / Tune-	Timer Menu	Menu / Home
Stop	Stop / Hold	Shuffle	Blue / Prime Video / Random
>>/Tune+	>> / Tune+	Repeat	Green / APP / Repeat
Preset+	Shift + >>I / Preset+	Program	TV/Radio /



Original	Recharge	Original	Recharge
Mode	Picture / Format		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
+10	Guide / EPG / -/-		
0	0		
Clear	Exit / Cancel / Clear		



<https://tout-telecommandes.fr/fr/Denon/1060229-92335-telecommande-de-remplacement-pour-Denon-RC-1229-30701026500AD.html>

Documents / Resources



[Mandis RC-1229 Remote Control](#) [pdf] Instructions
RC-1229 Remote Control, RC-1229, Remote Control, Control

References

- [M Télécommande qui remplace DENON RC-1229 \(30701026500AD\)](#)
- [User Manual](#)