




# Mandis RC-1253 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-1253 Remote Control Instructions 

## Contents

- [1 Mandis RC-1253 Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 Remote Using Instructions](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

# Mandis

**Mandis RC-1253 Remote Control**



## Product Information

The Denon RC1253 is a replacement remote control for various Denon devices. It is compatible with power devices such as CBL/SAT, media players, Blu-ray players, game consoles, and audio devices including CD players, tuners, USB devices, phonos, Bluetooth devices, microphones, and internet/radio devices. With this remote control, you can control various functions such as power, setup, audio tools, subtitle settings, TV/radio functions, picture format adjustments, sound settings, channel/page navigation, volume control, mute, info option, and more.

## Specifications

- Compatible Devices: CBL/SAT, media player, Blu-ray player, game console, aux 1, aux 2, TV audio, CD player, tuner, USB device, phono, Bluetooth device, microphone, internet/radio
- Power: Requires batteries (not included)
- Dimensions: N/A (not provided in the manual)
- Weight: N/A (not provided in the manual)

## Product Usage Instructions

Power Control:

- To turn on/off the device: Press the “Power” button.

### Device Selection:

- To select different devices (CBL/SAT, media player, Blu-ray player, etc.): Use the corresponding buttons labeled

on the remote control.

### **Setup and Audio Tools:**

- To access the setup menu: Press the “Setup” button.
- To access audio tools: Press the “Audio Tools” button.

### **Subtitle and EQ:**

- To adjust subtitles: Use the “Subtitle” button.
- To access the equalizer: Use the “EQ” button.

### **TV/Radio Functions:**

- To control TV functions: Use the buttons labeled for TV control (e.g., volume, channel/page navigation).
- To control radio functions: Use the buttons labeled for radio control (e.g., tuning).

### **Picture Format:**

- To adjust the picture format: Use the “Picture Format” button.

### **Sound Settings:**

- To adjust sound settings: Use the buttons labeled for sound control (e.g., sound mode, sound volume).

### **Channel/Page Navigation:**

- To navigate channels/pages: Use the “CH/Page+” and “CH/Page-” buttons.

### **Volume Control:**

- To increase/decrease volume: Use the “Vol+” and “Vol-” buttons.

### **Mute:**

- To mute/unmute the sound: Press the “Mute” button.

### **Info Option:**

- To access additional information/options: Use the “Info” button.

### **FAQ:**

**Q: Is this remote control compatible with all Denon devices?**

A: The Denon RC1253 is compatible with various Denon devices, including CBL/SAT, media players, Blu-ray players, game consoles, and more. However, it is recommended to check the compatibility list or consult the manufacturer for specific device compatibility.

**Q: How do I replace the batteries in the remote control?**

A: To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and remove the old batteries. Insert new batteries according to the polarity markings (+/-) and close the compartment securely.

**Remote Using Instructions**

**Original / Replacement**



Original		Replacement	
	Power		Power
	CBL/SAT		Setup / OPT /
	Media Player		Audio / Lang I/II
	Blu-ray		Subtitle / EQ
	Game		TV/Radio /
	Aux 1		Text / Goto
	Aux 2		AV / Input / RDS
	TV Audio		Picture / Format
	CD		Shift + 3
	Tuner		Shift + 6
	USB		8
	Phono		Sound / Title
	Bluetooth		9
	Micro		5
	Internet/Radio		6
	CH/Page+		CH+ / Page+
	ECO		Smart / List

Original		Replacement	
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Info		Info / Angle
	Option		Shift + Setup / OPT / Tools
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		D.Menu / Top
	I<</Tune-		I<< / Preset-
	Play/Pause		Play / Slow
	>>I/Tune+		>>I / Preset+
	HDMI/Out		Guide / EPG / -/--









Original	Replacement
 Power	 Power
 CBL/SAT	 Setup / OPT /
 Media Player	 Audio / Lang I/II
 Blu-ray	 Subtitle / EQ
 Game	 TV/Radio /
 Aux 1	 Text / Goto
 Aux 2	 AV / Input / RDS
 TV Audio	 Picture / Format
 CD	 Shift + 3
 Tuner	 Shift + 6
 USB	 8
 Phono	 Sound / Title
 Bluetooth	 9
 Micro	 5
 Internet/Radio	 6
 CH/Page+	 CH+ / Page+
 Volume+	 Vol+

Original	Replacement
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 I<</Tune-	 I<< / Preset-
 Play/Pause	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 Sleep	 Sleep / Timer
 Quick Select 1	 1
 Quick Select 2	 2
 Quick Select 3	 3
 Quick Select 4	 4



<https://all-remote-controls.co.uk/en/Denon/1066951-96524-replacement-remote-control-for-Denon-RC-1253-943307102460S.html>

## Documents / Resources



[Mandis RC-1253 Remote Control](#) [pdf] Instructions  
RC-1253 Remote Control, RC-1253, Remote Control, Control

## References

- [M Replacement remote control for DENON RC-1253 \(943307102460S\)](#)
- [User Manual](#)

