



Mandis RC-1910 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-1910 Remote Control Instructions 

Contents

- [1 Mandis RC-1910 Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Replacement Button Function](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Mandis

Mandis RC-1910 Remote Control



Product Information

Specifications

- **Model:** RC1910
- **Product Type:** Remote control
- **Compatibility:** Originale, Sostituto
- **Supported Functions:** Power Sleep, Screen Presets, FAV, Lang, Subtitle, TXT, Timer, Picture, Format, Setup, TVT/Roadsio, Shift, Progra/mMarker, PC, Audio, EQ, Goto, EPG, Swap, Photo/Music/Movi Woerld, Source Menu, Disp. Search Mode, Return, Guide, Marker, D.Menu, Top SmartMenu, AV Input, RDS Menu, Home, Exit, Cancel, Clear, Display, Media, Red/Netflix Search, Back/Return, CH+/Page+, Info/Vol+, CHMute/VolRec, Pause/|>| > Red/Zoom, Green/Repeat, Yellow/Root, Blue/Title

Product Usage Instructions

- **Power Sleep**

To activate the Power Sleep function, press the Power Sleep button on the remote control. This will put the device into sleep mode after a specified period of inactivity.

- **Screen Presets**

The Screen Presets feature allows you to select predefined screen settings for different viewing experiences. Use the corresponding buttons on the remote control to cycle through the available presets.

- **FAV**

The FAV button on the remote control allows you to quickly access your favorite channels or content. Press the FAV button to bring up a menu of your favorite selections and use the navigation buttons to choose and play your desired content.

• Lang

The Lang button on the remote control is used to change the language settings of the device. Press the Lang button to bring up the language menu and use the navigation buttons to select your preferred language.

• Subtitle

The Subtitle button on the remote control is used to enable or disable subtitles while watching a video or movie. Press the Subtitle button to toggle subtitles on or off.

• TXT


The TXT button on the remote control is used to access teletext services if supported by your device. Press the TXT button to enter teletext mode and use the navigation buttons to browse through the available pages.

Replacement Button Function



Originale	Sostituto	Originale	Sostituto
	Power		9
	Sleep		EPG
	Screen		0
	Presets		Swap
	FAV		Photo/Music/Movi
	Lang		World
	Subtitle		Source
	TXT		Menu
	1		Up
	2		Left
	3		OK
	4		Right
	5		Down
	6		C
	7		Disp.
	8		Search Mode
			Return
			Back / Return



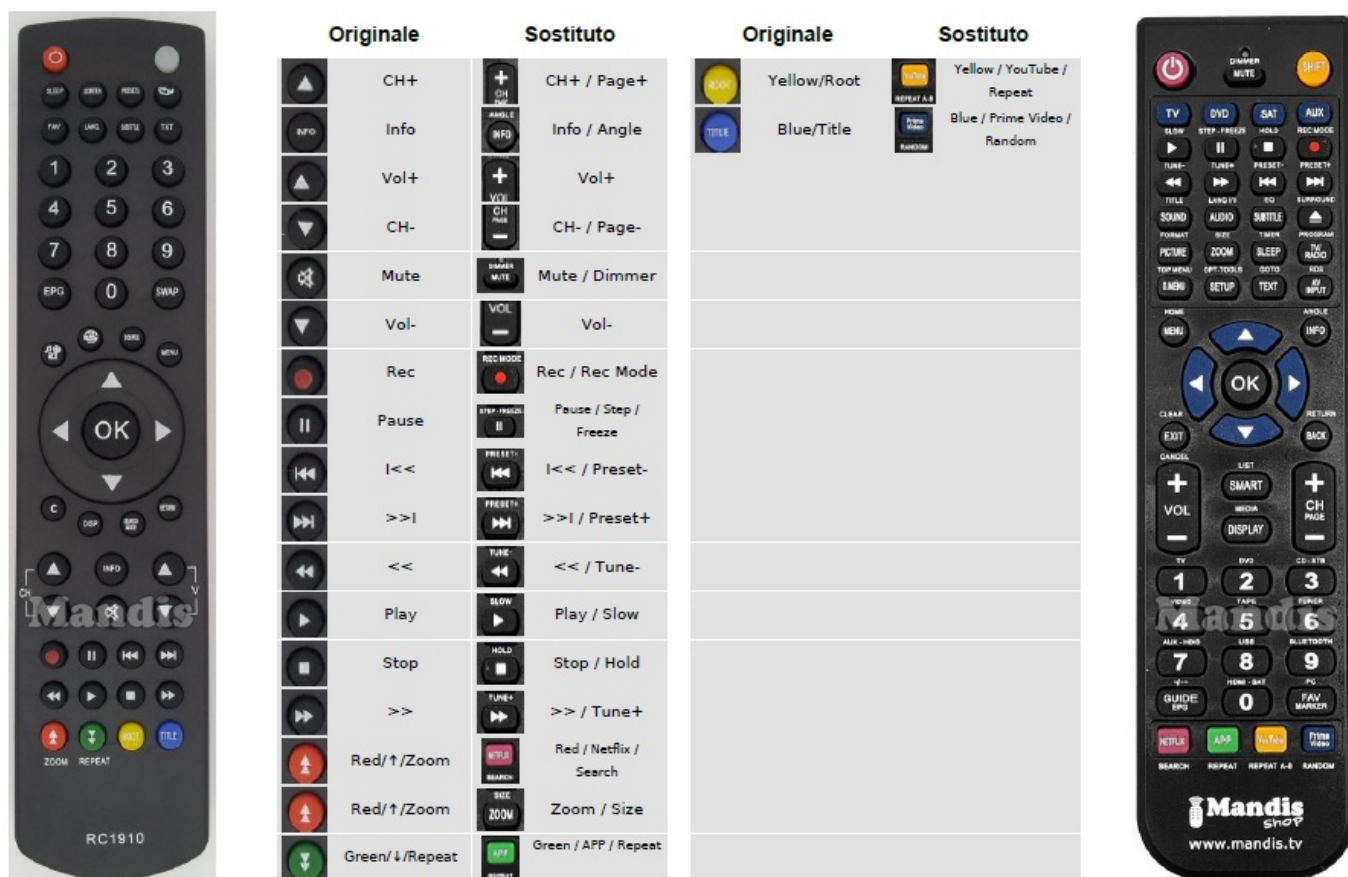

<https://tutti-i-telecomandi.it/it/1038799-18924-telecomando-di-sostituzione-per-RC-1910-30070046.html>.

FAQ

- **Q: Where can I find a replacement remote control?**

A: You can find a replacement remote control for the RC1910 model at the following website: [Replacement Remote Control](https://tutti-i-telecomandi.it/it/1038799-18924-telecomando-di-sostituzione-per-RC-1910-30070046.html).

Documents / Resources



[Mandis RC-1910 Remote Control](#) [pdf] Instructions
RC-1910 Remote Control, RC-1910, Remote Control, Control

References

- [M Telecomandi per tutti gli apparecchi](#)
- [M Telecomando sostituto di RC 1910 \(30070046\)](#)
- [User Manual](#)