

Mandis RC 2040 Replacement Remote Control



Mandis RC 2040 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC 2040 Replacement Remote Control Instructions 

Contents

- [1 Mandis RC 2040 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 OVERVIEW](#)
- [6 BUTTON FUNCTION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Mandis RC 2040 Replacement Remote Control



Product Information

Specifications

- Model: Original
- Power: Mute Power
- PP: I-II
- Number Buttons: 0-9
- Special Buttons: -P

Product Usage Instructions

Power Button

To turn the product on or off, press the “Power” button located on the top of the device.

Mute Button

The “Mute” button is used to temporarily silence any audio output from the device. Press the “Mute” button to activate or deactivate this feature.

Number Buttons

The number buttons, labeled from 0 to 9, are used for inputting numerical values. Press the desired number button to enter the corresponding number.

PP Buttons

The “PP” buttons, labeled as I and II, have a specific function depending on the context of usage. Please refer to the user manual for detailed instructions on how to use these buttons in different scenarios.

Special Buttons

The “-P” button is a special button that performs a specific action. Please refer to the user manual for detailed instructions on how to use this button and its functionality.

Frequently Asked Questions

- Q: How do I turn on/off the device?
A: To turn the device on or off, press the “Power” button located on the top of the device.
- Q: What is the purpose of the “Mute” button?
A: The “Mute” button is used to temporarily silence any audio output from the device. Press the “Mute” button to activate or deactivate this feature.
- Q: How do I input numbers?
A: Use the number buttons labeled from 0 to 9 to input numerical values. Press the desired number button to enter the corresponding number.
- Q: What do the “PP” buttons do?
A: The “PP” buttons, labeled as I and II, have a specific function depending on the context of usage. Please refer to the user manual for detailed instructions on how to use these buttons in different scenarios.
- Q: What does the “-P” button do?
A: The “-P” button is a special button that performs a specific action. Please refer to the user manual for detailed instructions on how to use this button and its functionality.

OVERVIEW






















 







 





 



 
 




 



 

 

 














BUTTON FUNCTION

Original

Recharge

	Mute		Mute / Dimmer
	Power		Power
	PP		Back / Return
	I-II		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / -/--
	P<P		Fav / Marker / PC
	Menu		Menu / Home

	Info		Info / Angle
	Left		Left
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Down		Down
	P-		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	Red/Sound		Red / Netflix / Search
	Red/Sound		Sound / Title
	Green/Picture		Green / APP / Repeat
	Green/Picture		Picture / Format
	Yellow/Feature		Yellow / YouTube / Repeat
	Blue/Install		Blue / Prime Video / Random
	TV		TV/Radio /
	AV		AV / Input / RDS
	[≡]		Text / Goto
	[/≡]		Shift + Text /
	[≡o]		Sleep / Timer
	[≡+]		Stop / Hold
	[≡x]		Setup / OPT /
	[≡♦]		Zoom / Size
	[≡?]		Smart / List
	[≡i]		Display / Media

<https://tout-telecommandes.fr/fr/1055030-18272-telecommande-de-remplacement-pour-RC-2040-20068713.html>

Documents / Resources



[Mandis RC 2040 Replacement Remote Control](#) [pdf] Instructions

RC 2040 Replacement Remote Control, RC 2040, Replacement Remote Control, Remote Control

References

- [M Télécommande qui remplace RC 2040 \(20068713\)](#)
- [User Manual](#)