



Mandis RC 2440 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC 2440 Remote Control Instructions 

Contents

- [1 Mandis RC 2440 Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



Mandis RC 2440 Remote Control



Product Information

Specifications

- Product Name: Original PP Power
- Model Number: RC2440
- Compatible with: TV, Radio, AV devices
- Preset Options: 9
- Additional Features: PI, RDS
- Product Dimensions: Not specified
- Product Weight: Not specified

Product Usage Instructions



Original	Replacement	Original	Replacement
PP	BACK	Mute	Mute / Dimmer
Power	Power	Left	Left
1	1	Up	Up
2	2	Right	Right
3	3	OK	OK
4	4	Down	Down
5	5	V -	Vol-
6	6	V +	Vol+
7	7	P -	CH- / Page-
8	8	P +	CH+ / Page+
9	9	SOUND	Red / Sound
P<P	Fav / Marker / PC	SOUND	Red / Sound
0	0	PICTURE	Green / Picture
--	Guide / EPG / -/--	PICTURE	Green / Picture
Menu [M]	Menu / Home	FEATURE	Yellow / Feature
Info [I]	Info / Angle	INSTALL	Blue / Install
I-II	Audio / Lang I/II	Text	Text / Goto



Original	Replacement
[≡o]	SLEEP
Hold	HOLD
[≡X]	EXIT
Mix / PIP Swap	LIST
PIP / Size	SIZE
PIP Down / [≡?]	PRESET-
PIP Up / Index	PRESET+
[TV]	PROGRAM
[AV]	AV INPUT

Power On/Off

To power on the device, press the “PP Power” button once. To power off the device, press the same button again.

Changing Channels

To change channels, use the numbered buttons (1-9) on the remote control. Press the corresponding number button for the desired channel.

Preset Options

This remote control offers 9 preset options. To access the preset options, press the “PI / Preset+” button. Use the numbered buttons (1-9) to select the desired preset option.

TV/Radio/AV Selection

To switch between TV, Radio, and AV modes, press the “TV/Radio / AV” button.

Additional Features

This remote control supports additional features such as PI (Program Information) and RDS (Radio Data System).

Use the respective buttons to access and utilize these features.

FAQ

Q: Where can I find a replacement remote control for RC2440?

A: You can find a replacement remote control for RC2440 at the following website:

[Replacement Remote Control for RC-2440.](https://all-remote-controls.co.uk/en/1059041-19075-replacement-remote-control-for-RC-2440-08005189.html)

RC2440

<https://all-remote-controls.co.uk/en/1059041-19075-replacement-remote-control-for-RC-2440-08005189.html>

Documents / Resources



[Mandis RC 2440 Remote Control](#) [pdf] Instructions

08005189, RC 2440 Remote Control, RC 2440, Remote Control, Control, Remote

References

- [M Replacement remote control for RC 2440 \(08005189\)](#)
- [User Manual](#)