



## Mandis RC-2530 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-2530 Remote Control Instructions 

**Mandis RC-2530 Remote Control**



## Contents

- [1 Remote Control Replacement](#)
- [2 Customer Support](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)

## Remote Control Replacement

| Original | Replacement |
|----------|-------------|
|----------|-------------|

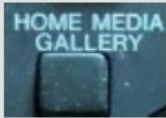
|                                                                                     |              |                                                                                                                                                                                          |                   |
|-------------------------------------------------------------------------------------|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|
|    | Power        |                                                                                                          | Power             |
|    | Continued    |                                                                                                         | Smart / List      |
|    | Open / Close |                                                                                                         | Eject / Surround  |
|    | Audio        |                                                                                                         | Audio / Lang I/II |
|    | Subtitle     |                                                                                                         | Subtitle / EQ     |
|  | Angle        |                                                                                                        | Info / Angle      |
|  | FL Dimmer    |                                                                                                       | Mute / Dimmer     |
|  | CD / SACD    |                                                                                                       | AV / Input / RDS  |
|  | HDMI         |  +  Shift +<br>0 |                   |
|  | Top Menu     |                                                                                                       | D.Menu / Top      |



Function



Exit



Home Media



Menu / Popup



Up



Down



Left



+



Shift +  
Setup /  
OPT / Tools



Exit / Cancel / Clear



+



Shift +  
Display /  
Media



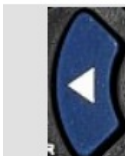
Setup / OPT /



Up



Down











Left




Original

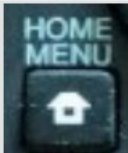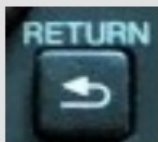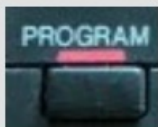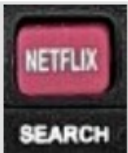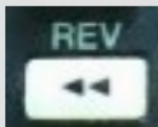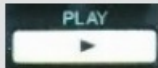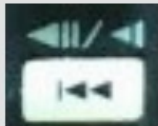Replacement


|                                                                                     |                  |                                                                                     |                             |
|-------------------------------------------------------------------------------------|------------------|-------------------------------------------------------------------------------------|-----------------------------|
|     | Right            |     | Right                       |
|    | Enter            |    | OK                          |
|    | Home Menu        |    | Menu / Home                 |
|    | Return           |    | Back / Return               |
|    | Red / Program    |    | Red / Netflix / Search      |
|   | Green / Bookmark |   | Green / APP / Repeat        |
|  | Yellow / Zoom    |  | Yellow / YouTube / Repeat   |
|  | Blue / Index     |  | Blue / Prime Video / Random |
|  | <<               |  | << / Tune-                  |
|  | Play             |  | Play / Slow                 |
|  | >>               |  | >> / Tune+                  |
|  | I<<              |  | I<< / Preset-               |

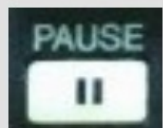


Pause

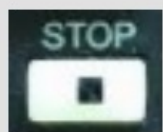


Stop

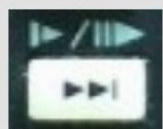

>>I

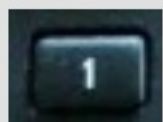


1

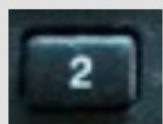

2



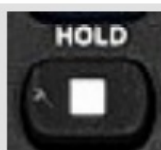Pause / Step /  
Freeze



Stop / Hold



>>I / Preset+



1



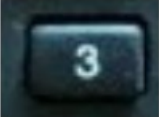
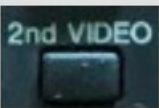
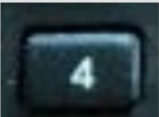
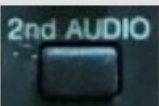
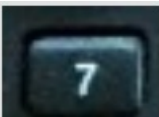
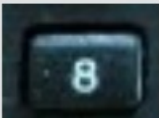
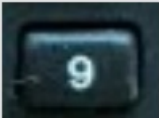
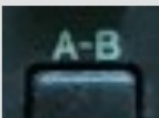
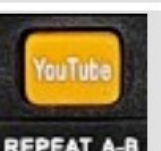
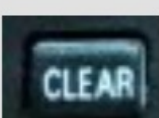
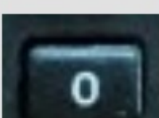
2









Original

Replacement

|                                                                                     |           |                                                                                                                                                                             |                                     |
|-------------------------------------------------------------------------------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|
|    | 3         |                                                                                            | 3                                   |
|    | 2nd Video |  +      | Shift +<br>1                        |
|    | 4         |                                                                                            | 4                                   |
|    | 5         |                                                                                            | 5                                   |
|    | 6         |                                                                                            | 6                                   |
|   | 2nd Audio |  +    | Shift +<br>2                        |
|  | 7         |                                                                                          | 7                                   |
|  | 8         |                                                                                          | 8                                   |
|  | 9         |                                                                                          | 9                                   |
|  | A-B       |  +  | Shift +<br>Yellow /<br>YouTube /    |
|  | Clear     |  +  | Shift + Exit<br>/ Cancel /<br>Clear |
|  | 0         |                                                                                          | 0                                   |
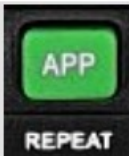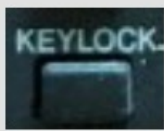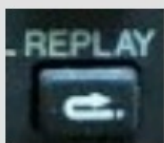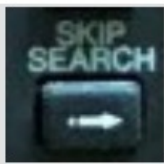
|                                                                                   |             |                                                                                                                                                                         |                             |
|-----------------------------------------------------------------------------------|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|
|  | Repeat      |  +  | Shift +<br>Green /<br>APP / |
|  | Display     |                                                                                        | Display / Media             |
|  | Keylock     |                                                                                        | Text / Goto                 |
|  | Replay      |                                                                                        | Vol+                        |
|  | Skip Search |                                                                                        | Vol-                        |

Customer Support

<https://all-remote-controls.co.uk/en/Pioneer/1066544-90733-replacement-remote-control-for-Pioneer-RC2530-06-RC2531-A000.html>

[RC-2530](#)



**Mandis** SHOP

---

## Documents / Resources



[Mandis RC-2530 Remote Control](#) [pdf] Instructions  
RC-2530, RC-2530 Remote Control, Remote Control, Control

## References

- [M Replacement remote control for PIONEER RC2530 \(06-RC2531-A000\)](#)
- [User Manual](#)