




# Mandis RC-270 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-270 Remote Control Instructions 

## Contents

- [1 Mandis RC-270 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Specifications](#)
- [5 USING INSTRUCTION](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

# Mandis

**Mandis RC-270 Remote Control**



## Product Information

### Specifications

- Product Name: Power Prog/Direct
- Model Number: Original
- Functions: Power, Program/Direct, Number keys (1-10 and +10), Call, Play, Pause, Stop

### Product Usage Instructions

#### Power On/Off

To power on the device, press the Power button located on the remote control. To power off the device, press and hold the Power button until the device shuts down.

#### Program/Direct Function

The Program/Direct function allows you to directly enter a channel number. Press the corresponding number key (1-9) to select a single-digit channel. For double-digit channels, press the two corresponding number keys in sequence. To access channels above 10, press the +10 key followed by the desired single-digit channel key.

#### Call Function

The Call function can be used to initiate or answer a phone call when the device is connected to a compatible phone. Press the Call button to make a call or answer an incoming call.

## Play, Pause, and Stop Functions

The Play button is used to start playing media files. Pressing the Pause button will temporarily pause the playback, and pressing it again will resume playback. The Stop button is used to stop playback completely.

## Replacement Model Information

### Specifications

- Product Name: Power Sleep
- Model Number: Replacement
- Functions: Power, Sleep, Number keys (1-10), Guide, Pre Ch, Play, Pause, Stop

### FAQ

- **Q:** How do I change the channel on the Original model?
- **A:** To change the channel, use the Program/Direct function by pressing the corresponding number keys or the +10 key followed by the desired single-digit channel key.
- **Q:** What is the Sleep function on the Replacement model?
- **A:** The Sleep function allows you to set a timer for the device to automatically turn off after a specific period of time. Press the Sleep button and use the number keys to select the desired sleep duration.
- **Q:** Can I use the Original remote control with the Replacement model?
- **A:** Yes, the Original remote control is compatible with the Replacement model. However, please note that some buttons may have different functions.

## USING INSTRUCTION



Original	Replacement	Original	Replacement
Power	Power	Rec	Rec
Prog/Direct	Sleep	>>I	>>I
1	1	I<<	I<<
2	2	>>	>>
3	3	<<	<<
4	4	Time	AV
5	5	Clear	Exit
6	6	Enter	Ok
7	7	Title	Info
8	8	Character	Options
9	9	Edit	TV/R
10	0	Repeat 1/ALL	Text
+10	Guide	Repeat A-B	D. Menu
Call	Pre Ch	Random	Media
Play	Play	Eject	Eject
Pause	Pause	Memory Rec	Format
Stop	Stop	Synchro Rec	3D



## Documents / Resources



[Mandis RC-270 Remote Control](#) [pdf] Instructions  
RC-270 Remote Control, RC-270, Remote Control, Control

## References

- [M Replacement remote control for DENON RC-270 \(00D3990473003\)](#)
- [User Manual](#)