



Mandis RC 600 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC 600 Remote Control Instructions 

Contents

- [1 Mandis RC 600 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Remote Replacement Button Function](#)
- [5 Frequently Asked Questions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Mandis

Mandis RC 600 Remote Control



Product Information

The Power DVR is a remote control device designed for use with Kathrein RC 600 19900398. It is a replacement remote control that provides the same functionality as the original remote control.

Specifications

- **Model:** RC 600 19900398
- **Compatibility:** Kathrein RC 600 19900398
- **Color:** Black
- **Dimensions:** N/A
- **Weight:** N/A

Product Usage Instructions

Original Remote Control Functions:

- **Power:** Turns the device on or off.
- **DVR:** Controls the digital video recorder functions.
- **TV/R:** Switches between TV and radio modes.
- **EPG Menu:** Accesses the electronic program guide menu.
- **Navigation Buttons:** Up, Down, Left, Right – Navigate through menus and options.
- **OK:** Confirms a selection.
- **Prog:** Changes channels.

- **Exit:** Exits the current menu or function.

 
 
 

Replacement Remote Control Functions:

- **Power:** Turns the device on or off.
- **Smart:** Activates the smart functions of the device.
- **Shift + TV/R:** Switches between TV and radio modes.
- **Dual:** Allows dual-screen viewing.
- **Back:** Goes back to the previous menu or function.
- **AV:** Switches between different audio/video inputs.
- **Options:** Accesses additional options or settings.
- **Guide:** Displays the TV guide.
- **Sleep:** Set a sleep timer.
- **Navigation Buttons:** Up, Down, Left, Right – Navigate through menus and options.
- **Ok:** Confirms a selection.
- **Stop:** Stops playback or recording.
- **Red/Rec Green:** Starts recording.
- **>/>>I:** Fast forwards or skips forward during playback.
- **1-9, 0:** Numeric buttons for channel selection or input.
- **Info:** Displays additional information about the current program or content.
- **Mute:** Mutes the sound.
- **Vol + / Vol -:** Adjusts the volume level.

Remote Replacement Button Function

[RC 600 19900398](#)



Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	DVR		Smart		Red / Rec		Red
	R		Shift + TV/R		Red / Rec		Rec
	TV		TV/R		Green / <<		Green
	OO		Dual		Green / <<		<<
	F		Back		Green / <<		I<<
	⌚		AV		Yellow / Play		Yellow
	A/B		Options		Yellow / Play		Play
	EPG		Guide		Blue / >>		Blue
	Menu		Menu		Blue / >>		>>
	Up		Up		Blue / >>		>>I
	Left		Left		1		1
	OK		Ok		2		2
	Right		Right		3		3
	Down		Down		4		4
	Prog		Sleep		5		5
	Exit		Exit		6		6

[illegible]

Frequently Asked Questions

- **Q: Is the Power DVR compatible with all Kathrein devices?**

A: No, the Power DVR is specifically designed for use with Kathrein RC 600 19900398. Please ensure compatibility before purchasing.

- **Q: Where can I find the user manual for the Power DVR remote control?**

A: The user manual for the Power DVR remote control can be found on the manufacturer's website or by contacting their customer support.

- **Q: Can the Power DVR remote control be programmed to work with other devices?**

A: No, the Power DVR remote control is only compatible with Kathrein RC 600 19900398 and cannot be programmed to work with other devices.

- **Q: How do I change the batteries in the Power DVR remote control?**

A: To change the batteries, locate the battery compartment on the back of the remote control. Open the compartment and remove the old batteries. Insert new batteries according to the polarity markings and close the compartment.

<https://all-remote-controls.co.uk/en/Kathrein/1063386-55511-replacement-remote-control-for-Kathrein-RC-600-19900398.html>.

Documents / Resources



[Mandis RC 600 Remote Control](#) [pdf] Instructions
RC 600, RC 600 Remote Control, Remote Control, Control

References

-  [Replacement remote control for KATHREIN RC 600 19900398](#)
- [User Manual](#)