



Mandis RC-666S EMERX Onkyo Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis RC-666S EMERX Onkyo Remote Control Instruction Manual 

Contents

- [1 Mandis RC-666S EMERX Onkyo Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage](#)
- [4 FAQ](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis RC-666S EMERX Onkyo Remote Control



Product Information

Specifications

- Model: Onkyo RC-666S_EMERX
- Original remote control
- Replacement remote control available
- Color: Black
- Dimensions: [insert dimensions]
- Weight: [insert weight]

Product Usage



Original	Recharge
STANDBY/ON	Power
SLEEP	Sleep
DIMMER	List
DISPLAY	Info
1 LINE 1/DVD	1
2 LINE 2	2
3 CD	3
4 TAPE 1	4
5 TAPE 2	5
6 PHONO	6
7 FM	7
8 AM	8
9	9
0	0
CLR	Pre Ch
DIRECT TUNING	Guide
TUNING UP	Up

Original	Recharge
TUNING DOWN	Down
PRESET UP	Ch +
PRESET DOWN	Ch -
HDD PLAYLIST	Smart
HDD PLAY LIST	Media
HDD ALBUM UP	Right
HDD ALBUM	Left
I<<	I<<
>>I	>>I
<<	<<
PLAY < DECK B	Shift + Pause
STOP DECK B	Shift + Stop
PLAY > DECK B	Shift + Play
STOP DECK A/HDD DOCK	Yellow
PAUSE	Green
>>	>>
PLAY > DECK A/HDD DOCK	Blue



Original	Recharge
PLAY < DECK A/HDD DOCK	Red
VOL+	Vol +
VOL-	Vol -
MUTING	Mute
REPEAT	Text
RANDOM	3D
CD PAUSE	Pause
DISC SKIP	Exit
CD STOP	Stop
CD PLAY	Play

Power

To turn the device on or off, press the STANDBY/ON button.

Tuning

To change the channel or frequency, use the TUNING DOWN button to go down or the PRESET UP button to go up.

Sleep Timer

To set a sleep timer, press the SLEEP button. Use the DIMMER button to adjust the timer duration.

Display Information

To view information about the current media or device, press the DISPLAY button.

Playlist and Media Selection

To navigate through playlists or media options, use the HDD PLAYLIST and HDD PULAPY LIST buttons. Use the 1 LINE 1/DVD, 2 LINE 2, and 3 CD buttons to select specific media.

Playback Controls

To control playback, use the appropriate buttons for each media type. For example, use the DECK A/HDD DOCK buttons for cassette tapes or HDD playback, use the CD buttons for CD playback, and so on.

Volume and Muting

To adjust the volume, use the VOL+ and VOL- buttons. To mute the sound, press the Vol Mute button.

Other Functions

Other functions such as repeat, random playback, disc skip, and 3D pause can be accessed using the corresponding buttons on the remote control.

FAQ

Where can I find a replacement remote control for Onkyo RC-666S_EMERX?

You can find a replacement remote control for Onkyo RC-666S_EMERX [here](https://tout-telecommandes.fr/fr/Onkyo/1057596-23519-telecommande-de-remplacement-pour-Onkyo-RC666S-24140666.html).

Onkyo RC-666S_EMERX

<https://tout-telecommandes.fr/fr/Onkyo/1057596-23519-telecommande-de-remplacement-pour-Onkyo-RC666S-24140666.html>

Documents / Resources



[Mandis RC-666S EMERX Onkyo Remote Control](#) [pdf] Instruction Manual
24140666, RC-666S EMERX Onkyo Remote Control, RC-666S EMERX, Onkyo Remote Control, Remote Control, Control

References

- [Télécommande qui remplace ONKYO RC666S \(24140666\)](#)
- [User Manual](#)