



Mandis RC-666S Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-666S Remote Control Instructions 

Mandis RC-666S Remote Control



Contents

- [1 Product View](#)
- [2 Buttons Description](#)
- [3 Customers Support](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Product View



SLEEP

DIMMER

DISPLAY

INPUT SELECTOR

1

LINE 1/DVD

2

LINE 2

3

CD

4

TAPE 1

5

TAPE 2

6

PHONO

7

FM

8

AM

9

CLR

0

DIRECT TUNING



TUNING



 
 
 
PRESET



 
 
 
HDD PLAYLIST



HDD ALBUM

 
 
 


DECK A/HDD(DOCK)



II

DECK B



Mandis



 
 
 
MUTING

RANDOM

REPEAT

DISC SKIP

CD



VOLUME



ONKYO

RC-666S

 


 
 


 
 
Buttons Description

Original	Replacement
 STANDBY/ON	 Power
 SLEEP	 Sleep
 DIMMER	 List
 DISPLAY	 Info

	1 LINE 1/DVD		1
	2 LINE 2		2
	3 CD		3
	4 TAPE 1		4
	5 TAPE 2		5
	6 PHONO		6
	7 FM		7
	8 AM		8

 9	 9
 0	 0
 CLR	 Pre Ch
 DIRECT TUNING	 Guide
 TUNING UP	 Up
 TUNING DOWN	 Down
 PRESET UP	 Ch +
 PRESET DOWN	 Ch -
 HDD PLAYLIST	 Smart

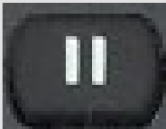	HDD PLAY LIST		Media
	HDD ALBUM UP		Right
	HDD ALBUM		Left
	<<		<<
	>>		>>
	<<		<<
	PLAY < DECK B		+  Shift + Pause
	STOP DECK B		+  Shift + Stop

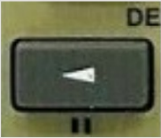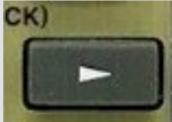 PLAY > DECK B	 +  Shift + Play
 STOP DECK A/HDD DOCK	 Yellow
 PAUSE	 Green
 >>	 >>
 PLAY > DECK A/HDD DOCK	 Blue



PLAY < DECK
A/HDD DOCK



VOL+



VOL-



MUTING



Red



 
Vol +



Vol -



Mute

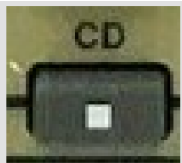	REPEAT		Text
	RANDOM		3D
	CD PAUSE		Pause
	DISC SKIP		Exit
	CD STOP		Stop
	CD PLAY		Play

Customers Support

<https://tout-telecommandes.fr/fr/Onkyo/1057596-23519-telecommande-de-remplacement-pour-Onkyo-RC666S-24140666.html>

Documents / Resources

	Mandis RC-666S Remote Control [pdf] Instructions RC-666S Remote Control, RC-666S, Remote Control, Control
	Mandis RC-666S Remote Control [pdf] Instructions RC-666S Remote Control, RC-666S, Remote Control, Control

References

- [M Télécommande qui remplace ONKYO RC666S \(24140666\)](#)
- [User Manual](#)