



Mandis RC-666S_EMERX Onkyo Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis RC-666S_EMERX Onkyo Remote Control Instruction Manual 

Contents

- [1 Mandis RC-666S_EMERX Onkyo Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 REPLACEMENT PARTS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Mandis RC-666S_EMERX Onkyo Remote Control



Product Information

The Onkyo RC-666S_EMERX is a remote control designed for use with Onkyo audio and video devices. It is an original remote control that comes with the product, but it can also be replaced with a compatible replacement remote control.

Specifications

- Model: RC-666S_EMERX
- Compatibility: Onkyo audio and video devices
- Original Remote Control: Yes
- Replacement Remote Control: Available
- Color: Black

Product Usage Instructions

• Power and Standby

The STANDBY/ON button is used to turn the device on or off. Press this button to switch between standby mode and power mode.

• Tuning and Presets

The TUNING DOWN button is used to decrease the tuning frequency. The PRESET UP button is used to select the next preset channel. The PRESET DOWN button is used to select the previous preset channel.

• Sleep Mode

The SLEEP button is used to activate the sleep mode. Press this button to set a timer for the device to automatically turn off after a specific period of time.

- **Display and Info**

The DISPLAY button is used to show information on the display screen of the device. The DIMMER button is used to adjust the brightness of the display.

- **Media Playback**

The HDD PLAYLIST button is used to access the playlist on the HDD. The 1 LINE 1/DVD button is used to select Line 1 or DVD as the input source. The HDD PULAPY LIST button is used to access the media list on the HDD. The 2 LINE 2 button is used to select Line 2 as the input source. The HDD DAOLWBUNM UP button is used to navigate up in the HDD menu. The HDD ALBUM button is used to select the album on the HDD.

- **Other Functions**

The CD button is used to select the CD as the input source. The TAPE 1 button is used to select Tape 1 as the input source. The DIO>I button is used to switch the digital input. The PHONO, FM, and AM buttons are used to select the respective input sources. The CLR button is used to clear any entered values. The DECK B STOP and DECK A/HDD DOCK PAUSE buttons are used for deck control. The PLAY, STOP, and PAUSE buttons are used for media playback control.

- **Volume and Muting**

The VOL+ button is used to increase the volume. The VOLMUTING button is used to mute the sound. The Vol + and Vol Mute Text buttons are alternative options for volume control.

- **Additional Features**

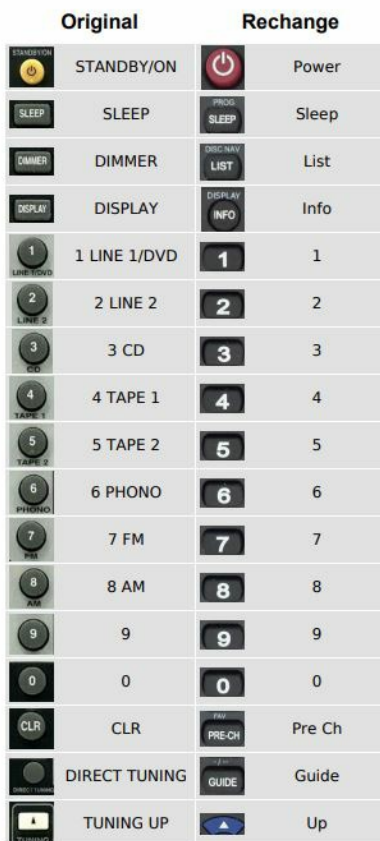
The 3D Pause, Exit, and Play buttons are used for specific device functions.

FAQ

Q: Where can I find a replacement remote control for Onkyo RC-666S_EMERX?

A: You can find a compatible replacement remote control for Onkyo RC-666S_EMERX at [this link](#).

REPLACEMENT PARTS

[illegible]

Documents / Resources



[Mandis RC-666S EMERX Onkyo Remote Control](#) [pdf] Instruction Manual

RC-666S_EMERX Onkyo Remote Control, RC-666S_EMERX, Onkyo Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace ONKYO RC666S \(24140666\)](#)
- [User Manual](#)