



Mandis RC-666S_EMERX Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-666S_EMERX Replacement Remote Control Instructions 

Contents

- [1 Mandis RC-666S_EMERX Replacement Remote Control](#)
- [2 Product information](#)
- [3 Product Usage Instructions](#)
- [4 Replacement Button Function](#)
- [5 Frequently Asked Questions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Mandis

Mandis RC-666S_EMERX Replacement Remote Control



Product information

Specifications

- **Model:** Onkyo RC-666S_EMERX
- **Power:** Battery
- **Compatibility:** Onkyo devices
- **Color:** Original (Black)
- **Dimensions:** N/A
- **Weight:** N/A

Product Usage Instructions

Power On/Off

To turn on the device, press the STANDBY/ON button. To turn off the device, press the same button again.

Tuning and Volume Control

To adjust the volume, use the VOL+ and VOL- buttons. To tune to a different channel or track, use the PRESET UP and PRESET DOWN buttons.

Sleep Timer

To set a sleep timer, press the SLEEP button. Use the PRESET UP and PRESET DOWN buttons to select the

desired time, then press the SLEEP button again to activate the timer.

Display and Information

To view additional information about the current media or device status, press the DISPLAY or INFO button.

Media Playback Control

To control media playback, use the corresponding buttons for each media type:

- **CD:** Use the CD buttons (3, 4, PLAY, STOP, etc.)
- **Tape:** Use the TAPE buttons (4, PLAY, STOP, etc.)
- **DVD:** Use the LINE 1/DVD buttons (1, PLAY, STOP, etc.)
- **HDD:** Use the HDD PLAYLIST, HDD PULAPY LIST, HDD DAOLWBUNM UP, and HDD ALBUM buttons for various functions.

Other Functions

The remote control also includes additional functions such as DIMMER (adjusting display brightness), 3D Pause, and EXIT.

Replacement Button Function



Original	Rechange	Original	Rechange
	STANDBY/ON		Power
	SLEEP		Sleep
	DIMMER		List
	DISPLAY		Info
	1 LINE 1/DVD		1
	2 LINE 2		2
	3 CD		3
	4 TAPE 1		4
	5 TAPE 2		5
	6 PHONO		6
	7 FM		7
	8 AM		8
	9		9
	0		0
	CLR		Pre Ch
	DIRECT TUNING		Guide
	TUNING UP		Up
	TUNING DOWN		Down
	PRESET UP		Ch +
	PRESET DOWN		Ch -
	HDD PLAYLIST		Smart
	HDD PLAY LIST		Media
	HDD ALBUM UP		Right
	HDD ALBUM		Left
	I<<		I<<
	>>I		>>I
	<<		<<
	PLAY < DECK B		Shift + Pause
	STOP DECK B		Shift + Stop
	PLAY > DECK B		Shift + Play
	STOP DECK A/HDD DOCK		Yellow
	PAUSE		Green
	>>		>>
	PLAY > DECK A/HDD DOCK		Blue



References

-  [Télécommande qui remplace ONKYO RC666S \(24140666\)](#)
- [User Manual](#)