



Mandis RC-707M-RECEIVER Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-707M-RECEIVER Remote Control Instructions 



Contents

- [1 RC-707M-RECEIVER Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

RC-707M-RECEIVER Remote Control

Mandis RC 707M-RECEIVER Remote Control



Original	Replacement	Original	Replacement
Movie/TV	Shift + Display / Media		
Music	Shift + Smart / List		
Game	Smart / List		
THX	Picture / Format		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
D.TUN	Shift + 9		
Dimmer	Shift + Mute / Dimmer		
0	0		
Sleep	Sleep / Timer		



<https://all-remote-controls.co.uk/en/Onkyo/1061317-66284-replacement-remote-control-for-Onkyo-RC-717M-24140717.html>

Documents / Resources

[Mandis RC-707M-RECEIVER Remote Control](#) [pdf] Instructions
RC-707M-RECEIVER Remote Control, RC-707M-RECEIVER, Remote Control, Control

References

- [Replacement remote control for ONKYO RC-717M \(24140717\)](#)
- [User Manual](#)