



Mandis RC-707M-RECEIVER Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-707M-RECEIVER Replacement Remote Control Instructions 

Contents

- [1 Mandis RC-707M-RECEIVER Replacement Remote Control Instructions](#)
- [2 RC-707M-RECEIVER Replacement Remote Control](#)
- [3 Read More About This Manual & Download PDF:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

Mandis RC-707M-RECEIVER Replacement [Remote](#) Control Instructions



RC-707M-RECEIVER Replacement Remote Control



Original	Replacement	Original	Replacement
On / Standby	Power	SP A/B	Yellow / YouTube / Repeat
Display	Display / Media	Up	Up
DVD	Shift + 2	Menu	Menu / Home
VCR / DVR	D.Menu / Top	Left	Left
CBL / SAT	AV / Input / RDS	Enter	OK
GAME / TV	Shift + 1	Right	Right
MULTI CH	TV/Radio	Setup	Setup / OPT /
AUX	Shift + 7	Down	Down
TAPE	Shift + 5	Return	Back / Return
TUNER	Shift + 6	Audio	Audio / Lang / I/II
CD	Shift + 3	I<< / Preset-	I<< / Preset-
PHONO	Shift + Audio / Lang I/II	>>I / Preset+	>>I / Preset+
Muting	Mute / Dimmer	<< / Tune-	<< / Tune-
CH/Disc+ /	CH+ / Page+	Play	Play / Slow
Vol+	Vol+	Pause / Play Rev.	Pause / Step / Freeze
CH/Disc- / Album-	CH- / Page-	Stop	Stop / Hold
Vol-	Vol-		



Original	Replacement	Original	Replacement
Movie/TV	Shift + Display / Media		
Music	Shift + Smart / List		
Game	Smart / List		
THX	Picture / Format		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
D.TUN	Shift + 9		
Dimmer	Shift + Mute / Dimmer		
0	0		
Sleep	Sleep / Timer		



Read More About This Manual & Download PDF:

Documents / Resources



[Mandis RC-707M-RECEIVER Replacement Remote Control](#) [pdf] Instructions RC-707M-RECEIVER Replacement Remote Control, RC-707M-RECEIVER, Replacement Remote Control, Remote Control

References

-  [Replacement remote control for ONKYO RC-717M \(24140717\)](#)
- [User Manual](#)