



Mandis RC-849S Onkyo Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-849S Onkyo Remote Control Instructions 

Contents

- [1 Mandis RC-849S Onkyo Remote Control](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 REMOTE FUNCTION](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Mandis

Mandis RC-849S Onkyo Remote Control



Specifications

- **Model:** Onkyo RC-849S
- **Compatibility:** Onkyo devices
- **Power:** Battery-operated
- **Connectivity:** CD, Tuner, Line, Digital, USB
- **Features:** Power Open/Close, Dimmer Display, Sleep, Pause, Recharge

Product Usage Instructions

- **Power On/Off**
 - To power the device, press the “Power” button. To power off the device, press and hold the “Power” button.
- **Display Dimmer**
 - To adjust the display brightness, use the “Dimmer” button. Press it repeatedly to cycle through different brightness levels.
- **Sleep Timer**
 - To set a sleep timer, press the “Sleep” button. Use the “+” and “-” buttons to adjust the desired sleep duration. The device will automatically turn off after the set time.
- **CD Playback**

 
- To play a CD, press the “CD” button. Use the “+”, “-”, “<”, and “>” buttons for navigation and playback control.
- **Tuner Usage**
 - To listen to the radio, press the “Tuner” button. Use the “+”, “-”, “<”, and “>” buttons to tune into different stations.
- **Line Input**
 - To use the line input, connect an external audio device to the device’s line input port. Press the “Line” button to activate the line input mode.
- **Digital Input**
 - To use the digital input, connect a compatible digital audio source to the device. Press the “Digital” button to select the digital input mode.
- **USB Playback**
 - To play audio files from a USB device, connect the USB device to the device’s USB port. Press the “USB” button to access and control the USB playback.
- **Pause/Step/Freeze**
 - During playback, press the “Pause” button to pause the audio or video. Press it again to resume playback. Use the “<”, “>”, or “|>|” buttons for step-by-step playback or freeze frames (if supported).
- **Subtitle/Equalizer**
 - Press the “Subtitle” button to toggle subtitles on and off (if supported). Press the “EQ” button to access and adjust the equalizer settings.
- **Main Menu**
 - Press the “Menu” button to access the main menu of the device.
 - Use the arrow buttons (Up, Down, Left, Right) to navigate through menu options. Press “Enter” or “OK” to confirm selections. Press “Return” or “Back” to go back to the previous menu.
- **Volume Control**
 - Use the “Vol+” and “Vol-” buttons to increase or decrease the volume level.
- **Tone Control**
 - Use the “Tone” button to access and adjust tone settings (bass, treble, etc.) if available.
- **Memory and Presets**
 - Use the “Memory” button to store favorite radio stations or settings. Use the “Preset+” or “Preset-” buttons to cycle through preset stations or settings.
- **Random and Repeat**
 - Press the “Random” button to play audio files in random order (if supported). Press the “Repeat” button to enable repeat mode (repeat one, repeat all, etc.).

OVERVIEW





REMOTE FUNCTION

Original		Recharge		Original		Recharge	
	Power		Power		Up		Up
	Open/Close		Eject / Surround		Left		Left
	Dimmer		Shift + Mute / Dimmer		Enter		OK
	Display		Display / Media		Right		Right
	Sleep		Sleep / Timer		Menu		Menu / Home
	CD		Shift + 3		Down		Down
	Tuner		Shift + 6		Return		Back / Return
	Line		Subtitle / EQ		Vol+		Vol+
	Digital		D.Menu / Top		Tone Ball		Smart / List
	USB		Shift + 8		Vol-		Vol-
	Pause		Pause / Step / Freeze		Muting		Mute / Dimmer
	I<</> Preset		I<< / Preset-		Memory		TV/Radio /
	Play		Play / Slow		Random		Blue / Prime Video / Random
	Preset >/>>I		>>I / Preset+		Repeat		Green / APP / Repeat
	<</> Tun		<< / Tune-		1		1
	Stop		Stop / Hold		2		2
	Tun >/>>		>> / Tune+		3		3

Original		Recharge	
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	>10		Guide / EPG / -/--
	0/10		0
	D.Tun/Clear		Exit / Cancel / Clear

FAQ


FAQ (Frequently Asked Questions)

Q: Where can I find a replacement remote control for the Onkyo RC-849S?

A: You can find a replacement remote control for Onkyo RC-849S on the following website: [Remote Control Replacement for Onkyo RC-849S](https://tout-telecommandes.fr/fr/Onkyo/1066543-96495-telecommande-de-remplacement-pour-Onkyo-RC-849S-24140849.html).

<https://tout-telecommandes.fr/fr/Onkyo/1066543-96495-telecommande-de-remplacement-pour-Onkyo-RC-849S-24140849.html>

Documents / Resources

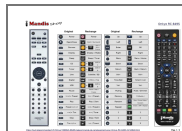

[Mandis RC-849S Onkyo Remote Control](#) [pdf] Instructions

RC-849S Onkyo Remote Control, RC-849S, Onkyo Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace ONKYO RC-849S \(24140849\)](#)
- [User Manual](#)