



Mandis RC-F0509E Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-F0509E Remote Control Instructions 

Mandis RC-F0509E Remote Control



Contents

 
- [1 Product View](#)
- [2 Buttons Description](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

 
 
 
 
 
 
 
Product View

 
 
 


 
 
 


Buttons Description

Original	Replacement
 Power	 Power
 RDS	 Smart
 PTY	 Media
 Rec Out Level	 Rec
 Timer	 Shift + AV

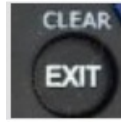 
 Band/Tuner	 TV/R
 Play/Pause iPod	 Red
 Play/Pause	 Green
 AUX	 AV
 Play/Pause CD	 Play
 Play/Pause USB	 Pause
 Stop	 Stop
 Sleep	 Sleep
 Folder	 Options
 Sound	 Dual
 EX. Bass	 Subt

 Enter	 Ok
 Vol Up	 Vol +
 Vol Down	 Vol -
 >/Next	 Right
 </Prev	 Left
 I<<	 I<<
 >>I	 >>I
 <</Tuning	 <<
 >>/Tuning Up	 >>
 Repeat	 Text
 Random	 3D
 P.Mode	 Format

 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 A.P.S.	 Blue
 Dimmer/Display	 Info
 Time Disp.	 Yellow
 Mute	 Mute



Clear



Exit

<https://all-remote-controls.co.uk/en/Kenwood/1061614-452-replacement-remote-control-for-Kenwood-RC-F0509E-A70174008.html>



Documents / Resources



[Mandis RC-F0509E Remote Control](#) [pdf] Instructions
RC-F0509E Remote Control, RC-F0509E, Remote Control, Control

References

- [M Replacement remote control for KENWOOD RC-F0509E \(A70174008\)](#)
- [User Manual](#)