



Mandis RC-R0-628 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC-R0-628 Replacement Remote Control Instructions 

Contents

- [1 Mandis RC-R0-628 Replacement Remote Control](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 REMOTE FUNCTION](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Mandis

Mandis RC-R0-628 Replacement Remote Control



Specifications

- RDS Display
- Display / Media
- Left P.Call/ n/>M>ul Iti
- Down
- > / Tune+
- Play Reverse
- Left
- 8 9 0 +10 Loudness/Down Up PPaaggee/PTY Set Up Sound Listen Mode
- Guide / EPG / -/CH- / PageCH+ / Page+ Setup / OPT / SounTdoo/lsTitle Smart / List
- Play/Pause / Band
- Bass Boost
- A/B / +100 / Disc Skip
- Auto / Stop DVD AUX
- CD/DVD Tuner
- Play / Slow
- Pause / Step / Freeze
- Audio / Lang I/II
- Fav / Marker / PC
- Stop / Hold
- Shift + 2
- Shift + 7
- Shift + 3

- Shift + 6
- Subtitle / EQ
- Eject / Surround
- Mute / Dimmer
- Vol-
- Vol+
- DVD Power 1 2 3 4 5 6 7 8 9 0
- +10 Menu OSD Return Top Menu Left/I Tuning
- Enter Play/Pause
- Stop Pause
- Up >>I / Preset+
- Down > / Tune+
- OK Play / Slow Stop / Hold
- Pause / Step / Freeze

Product Usage Instructions

RDS Display

The RDS Display button allows you to toggle between different display modes for RDS information.

Display / Media

The Display / Media button allows you to switch between different display modes and media sources.

Left P.Call/ n/>M>ul Iti

The Left P.Call/ n/>M>ul Iti button is used for various functions such as paging, calling, and navigating through menus.

OVERVIEW





REMOTE FUNCTION

Original	Rechange	Original	Rechange
 1	 1	 RDS Display	 Display / Media
 2	 2	 Left P.Call/ </I<<	 I<< / Preset-
 3	 3	 Up Multi Control	 Up
 Power	 Power	 Right P.Call	 >>I / Preset+
 4	 4	 Down Multi	 Down
 5	 5	 << Tuning	 << / Tune-
 6	 6	 >> Tuning	 >> / Tune+
 7	 7	 Play Reverse	 Left
 8	 8	 Play/Pause / Band	 Play / Slow
 9	 9	 Play/Pause / Band	 Pause / Step / Freeze
 0	 0	 Bass Boost	 Audio / Lang I/II
 +10	 Guide / EPG / -/-	 A/B / +100 / Disc Skip	 Fav / Marker / PC
 Loudness/Down	 CH- / Page-	 Auto / Stop	 Stop / Hold
 Up Page/PTY	 CH+ / Page+	 DVD	 +  2 Shift + 2
 Set Up	 Setup / OPT /	 AUX	 +  7 Shift + 7
 Sound	 Sound / Title	 CD/DVD	 +  3 Shift + 3
 Listen Mode	 Smart / List	 Tuner	 +  6 Shift + 6

Original

Rechange

 MD/Tape	 +  5 Shift + 5
 Video1	 +  4 Shift + 4
 Video 2	 +  8 Shift + 8
 Active EQ	 Subtitle / EQ
 Tone	 Eject / Surround
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Vol+	 Vol+

Original	Rechange	Original	Rechange
 DVD Power	 Power	 Up	 Up
 1	 1	 Right/>>>I	 >>I / Preset+
 2	 2	 Down	 Down
 3	 3	 << Tuning	 << / Tune-
 4	 4	 >> Tuning	 >> / Tune+
 5	 5	 Enter	 OK
 6	 6	 Play/Pause	 Play / Slow
 7	 7	 Stop	 Stop / Hold
 8	 8	 Pause	 Pause / Step / Freeze
 9	 9		
 0	 0		
 +10	 Guide / EPG / -/-		
 Menu	 Menu / Home		
 OSD	 Display / Media		
 Return	 Back / Return		
 Top Menu	 D.Menu / Top		
 Left/I<<	 I<< / Preset-		

FAQ

- Where can I find a replacement remote control for KenwoodRCR0628?
- You can find a replacement remote control for Kenwood RCR0628 at [this website](https://tout-telecommandes.fr/fr/Kenwood/1058104-922-telecommande-de-remplacement-pour-Kenwood-RC-R0-628-A70161405.html).

<https://tout-telecommandes.fr/fr/Kenwood/1058104-922-telecommande-de-remplacement-pour-Kenwood-RC-R0-628-A70161405.html>

Documents / Resources

	Mandis RC-R0-628 Replacement Remote Control [pdf] Instructions RC-R0-628 Replacement Remote Control, RC-R0-628, Replacement Remote Control, Remote Control
---	---

References

- [User Manual](#)