



Mandis RC033SR Marantz Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC033SR Marantz Remote Control Instructions 

Contents

- [1 Mandis RC033SR Marantz Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 REPLACEMENT PARTS](#)
- [6 REMOTE FUNCTIONS](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Mandis

Mandis RC033SR Marantz Remote Control Instructions



Product Information

Specifications

- Product Name: Marantz RC033SR
- Compatible with: CBL/SAT Media Player, Blu-ray/DVD, Game, AUX, Tuner, USB, TV, Audio
- Power Sleep feature included
- Smart Select buttons: Smart Select 1, Smart Select 2, Smart Select 3, Smart Select 4
- Colour buttons: Green/Movie, Red/Music, Blue/Game, Yellow/Pure
- Text Eject button
- AV button
- Originale and Sostituto buttons for switching between original and replacement remote control modes

- Compatibility: Marantz RC033SR
- Product Link: [Marantz RC033SR Replacement Remote Control](#)

Product Usage Instructions

Power Sleep Feature

The Marantz RC033SR remote control includes a Power Sleep feature. This allows you to put your device into sleep mode to conserve power when not in use. To activate the Power Sleep feature, press the Power Sleep button.

Smart Select Buttons

The Marantz RC033SR remote control has four Smart Select buttons. These buttons allow you to quickly access your favorite devices or functions. To use the Smart Select feature, follow these steps:

1. Press the desired Smart Select button (Smart Select 1, Smart Select 2, Smart Select 3, Smart Select 4).
2. The remote control will automatically switch to the selected device or function.

Color Buttons

The Marantz RC033SR remote control includes four colour buttons: Green/Movie, Red/Music, Blue/Game, and Yellow/Pure. These buttons can be used for various functions depending on the device you are controlling. Refer to your device's user manual for specific instructions on utilizing the colour buttons.

Text Eject Button

The Text Eject button on the Marantz RC033SR remote control allows you to eject text or subtitles when available on your device. Press the Text Eject button to activate this feature.

AV Button

The AV button on the Marantz RC033SR remote control is used to switch between different audio or video inputs on your device. Press the AV button to cycle through the available AV inputs.

Originale and Sostituto Buttons

The Marantz RC033SR remote control includes Originale and Sostituto buttons. These buttons allow you to switch between the original and replacement remote control modes. Press the Originale button to use the original remote control mode, and press the Sostituto button to use the replacement remote control mode.

Frequently Asked Questions (FAQ)

- Q: What devices are compatible with the Marantz RC033SR remote control?
- A: The Marantz RC033SR remote control is compatible with CBL/SAT Media Player, Blu-ray/DVD, Game, AUX, Tuner, USB, TV, and Audio devices.
- Q: How do I activate the Power Sleep feature?
- A: To activate the Power Sleep feature on the Marantz RC033SR remote control, simply press the Power Sleep button.
- Q: How do I use the Smart Select buttons?
- A: To use the Smart Select buttons on the Marantz RC033SR remote control, press the desired Smart Select button (Smart Select 1, Smart Select 2, Smart Select 3, Smart Select 4). The remote control will automatically switch to the selected device or function.
- Q: What does the Text Eject button do?
- A: The Text Eject button on the Marantz RC033SR remote control allows you to eject text or subtitles when

available on your device.

- Q: How do I switch between original and replacement remote control modes?
- A: To switch between original and replacement remote control modes on the Marantz RC033SR remote control, press the Originale button to use the original remote control mode, and press the Sostituto button to use the replacement remote control mode.

OVERVIEW

Marantz RC033SR



REPLACEMENT PARTS

Originale

Sostituto

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	Media Player		2
	Blu-ray/DVD		3
	Game		4
	AUX		5
	Tuner		6
	USB		7
	Tv Audio		8
	CD		9
	·II·		Guide
	Bluetooth		0
	Internet Radio		Pre Ch
	CH/Page+		Ch +
	CH/Page-		Ch -
	Eco		3D

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	>>I/Tune+		>>I
	Smart Select 1		D. Menu
	Smart Select 2		Text
	Smart Select 3		Eject
	Smart Select 4		AV
	Green/Movie		Green
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow

REMOTE FUNCTIONS



<https://tutti-i-telecomandi.it/it/Marantz/1057182-82786-telecomando-di-sostituzione-per-Marantz-RC033SR-30701024900AM.html>

Documents / Resources



[Mandis RC033SR Marantz Remote Control](#) [pdf] Instructions

RC033SR Marantz Remote Control, RC033SR, Marantz Remote Control, Remote Control, Control

References

-  [Telecomando sostituto di MARANTZ RC033SR \(30701024900AM\)](#)
- [User Manual](#)