



Mandis RC033SR Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC033SR Replacement Remote Control Instructions 

Contents

- [1 Mandis RC033SR Replacement Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 REPLACEMENT PARTS](#)
- [6 BUTTON FUNCTIONS](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Mandis RC033SR Replacement Remote Control Instructions



Product Information

Specifications

- Product Name: Power Sleep CBL/SAT Media Player Blu-ray/DVD Game AUX Tuner USB Tv Audio
- Model: Marantz RC033SR
- Compatibility: Originale and Sostituto
- Smart Select Options: Smart Select 2, Smart Select 3, Smart Select 4

Product Usage Instructions

Power Sleep

The Power Sleep feature allows you to put your device in sleep mode when not in use. This helps conserve energy and extend battery life.

Remote Control Buttons

The remote control has several buttons for controlling different functions of the device:

- Vol+ and Vol-: Adjust the volume
- Vol Mute: Mute the volume

- Info: Display information about the current content
- Options: Access additional options and settings
- Back: Go back to the previous screen or menu
- Menu: Open the main menu
- Up, Down, Right, Left: Navigate through menus and options
- Ok: Confirm a selection or action
- I>I: Fast forward or tune to the next channel
- D. Menu: Open the detailed menu
- Eject: Eject a disc from the player
- AV Green, Red, Blue, Yellow: Color-coded buttons for specific functions (e.g., Green for Movie, Red for Music)

Smart Select

The Smart Select feature allows you to quickly access your favorite settings or sources. Use the corresponding buttons on the remote control (Smart Select 2, Smart Select 3, Smart Select 4) to assign and activate your preferred settings.

Text

The Text button allows you to input text or access additional text-related functions.

FAQ

- Q: What is Power Sleep?
- A: Power Sleep is a feature that puts the device in sleep modeV when not in use to save energy and extend battery life.
- Q: How do I adjust the volume?
- A: You can adjust the volume using the Vol+ and Vol- buttons on the remote control.
- Q: How do I mute the volume?
- A: To mute the volume, press the Vol Mute button on the remote control.
- Q: How do I navigate through menus and options?
- A: You can use the Up, Down, Right, and Left buttons on the remote control to navigate through menus and options.
- Q: How do I confirm a selection or action?
- A: To confirm a selection or action, press the Ok button on the remote control.
- Q: How do I eject a disc from the player?
- A: To eject a disc, press the Eject button on the remote control.
- Q: What are the color-coded buttons for?
- A: The color-coded buttons (AV Green, Red, Blue, Yellow) are used for specific functions, such as Movie, Music, Game, or Pure. They provide quick access to these functions.

OVERVIEW

Marantz RC033SR



REPLACEMENT PARTS

Originale		Sostituto	
	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	Media Player		2
	Blu-ray/DVD		3
	Game		4
	AUX		5
	Tuner		6
	USB		7
	Tv Audio		8
	CD		9
	Bluetooth		Guide
	Internet Radio		Pre Ch
	CH/Page+		Ch +
	CH/Page-		Ch -
	Eco		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	>>I/Tune+		>>I
	Smart Select 1		D. Menu

	Smart Select 2		Text
	Smart Select 3		Eject
	Smart Select 4		AV
	Green/Movie		Green
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow

BUTTON FUNCTIONS



<https://tutti-i-telecomandi.it/it/Marantz/1057182-82786-telecomando-di-sostituzione-per-Marantz-RC033SR-30701024900AM.html>



[Mandis RC033SR Replacement Remote Control](#) [pdf] Instructions

RC033SR Replacement Remote Control, RC033SR, Replacement Remote Control, Remote Control

References

- [M Telecomando sostituto di MARANTZ RC033SR \(30701024900AM\)](#)
- [User Manual](#)