



Mandis RC038SR-MAIN Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC038SR-MAIN Remote Control Instructions 

Contents

- [1 Mandis RC038SR-MAIN Remote Control](#)
- [2 PRODUCT OVERVIEW](#)
- [3 REMOTE USING INSTRUCTIONS](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



Mandis RC038SR-MAIN Remote Control



Specifications:

- **Power:** CBL/SAT, DVD, TV, Audio, Blu-ray
- AUX1, Tuner, Bluetooth, AUX2, Game, Phono, USB Media Player
- CD, Internet Radio, CH/Page+

Product Usage Instructions:

Power On/Off:

To power on the device, press the “Power” button. To power off the device, press and hold the “Power” button.

Changing Input Source:

To change the input source, use the corresponding buttons on the remote control. For example, to switch to the DVD input, press the “DVD” button.

Adjusting Volume:

To adjust the volume, use the “Volume+” and “Volume-” buttons on the remote control.

Navigating Menus:

Use the arrow buttons (Up, Down, Left, Right) to navigate through menus and options. Press the “Enter” button to select an option.

Additional Functions:

The remote control provides additional functions such as sleep timer, mute, display control, media playback controls (pause, play, etc.), and smart select options.

FAQ:

Q: How do I change the input source?

A: To change the input source, use the corresponding buttons on the remote control. For example, to switch to the DVD input, press the “DVD” button.

Q: How do I adjust the volume?

A: To adjust the volume, use the “Volume+” and “Volume-” buttons on the remote control.

Q: How do I navigate through menus?

A: Use the arrow buttons (Up, Down, Left, Right) to navigate through menus and options. Press the “Enter” button to select an option.

PRODUCT OVERVIEW



Original		Recharge		Original		Recharge	
	Power		Power		Sleep		Sleep / Timer
	CBL/SAT		Shift + 0		Volume+		Vol+
	DVD		Shift + 2		CH/Page-		CH- / Page-
	Tv Audio		Shift + 1		Mute		Mute / Dimmer
	Blu-ray		Shift + 4		Eco		D.Menu / Top
	AUX1		Shift + 5		Volume-		Vol-
	Tuner		Shift + 6		Info		Info / Angle
	Bluetooth		Shift + 9		Up		Up
	AUX2		Shift + 7		Option		Shift + Setup / OPT / Tools
	Game		Shift + Guide / EPG / -/-		Left		Left
	Phono		Guide / EPG / -/-		Enter		OK
	USB		Shift + 8		Right		Right
	Media Player		Display / Media		Back		Back / Return
	CD		Shift + 3		Down		Down
	Internet Radio		Shift + Fav / Marker / PC		Setup		Setup / OPT /
	CH/Page+		Smart / List		Home		Menu / Home
			CH+ / Page+		Stop		Stop / Hold



REMOTE USING INSTRUCTIONS



Original	Recharge	Original	Recharge
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-		I<< / Preset-
	>>I/Tune+		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Sound / Title
	Smart Select 2		Audio / Lang I/II
	Smart Select 3		Subtitle / EQ
	Smart Select 4		Eject / Surround
	Green/Movie		Green / APP / Repeat
	Red/Music		Red / Netflix / Search
	Blue/Game		Blue / Prime Video / Random
	Yellow/Pure		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3

Original		Recharge	
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Fav / Marker / PC



Original	Recharge
	Power
	CBL/SAT
	DVD
	Tv Audio
	Blu-ray
	AUX1
	Tuner
	Bluetooth
	Game
	AUX2
	Phono
	USB
	Media Player
	CD
	Internet Radio
	CH/Page+

Original	Recharge
	Sleep
	Volume+
	CH/Page-
	Mute
	Volume-
	Up
	Left
	Enter
	Right
	Back
	Down
	Home
	Stop
	Pause
	Play
	I<</Tune-
	>>I/Tune+





Original

Recharge

	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Sound / Title
	Smart Select 2		Audio / Lang I/II
	Smart Select 3		Subtitle / EQ
	Smart Select 4		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Fav / Marker / PC





Original	Recharge	Original	Recharge
	Power		Sleep
	CBL/SAT		Sleep / Timer
	DVD		Vol+
	Tv Audio		CH- / Page-
	Blu-ray		Mute / Dimmer
	AUX1		Vol-
	Tuner		Up
	Bluetooth		Left
	Game		Right
	AUX2		Back / Return
	Phono		Down
	USB		Menu / Home
	Media Player		Stop / Hold
	CD		Pause / Step / Freeze
	Internet Radio		Play / Slow
	CH+ / Page+		I<< / Tune-
			>>I / Tune+
			<< / Tune-





Original	Recharge
 >>	 >> / Tune+
 Smart Select 1	 Sound / Title
 Smart Select 2	 Audio / Lang I/II
 Smart Select 3	 Subtitle / EQ
 Smart Select 4	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 OK
 Enter	 Fav / Marker / PC



<https://tout-telecommandes.fr/fr/Marantz/1066299-82766-telecommande-de-remplacement-pour-Marantz-RC038SR-30701023400AM.html>

Documents / Resources

	Mandis RC038SR-MAIN Remote Control [pdf] Instructions RC038SR-MAIN, RC038SR-MAIN Remote Control, Remote Control, Control
---	---

References

- [!\[\]\(eae20f1adff742df783f6f7e3bbe72d1_img.jpg\) Télécommande qui remplace MARANTZ RC038SR \(30701023400AM\)](#)
- [User Manual](#)